

WLB5254AIP/X11

Wireless Broadband Router

User's Guide



SDTUM-151(Rev: 02, 06, 06, 08)

Table of Contents

Quick Installation Guide	4
1 Connecting the Wireless Broadband Router	5
2 Setting Up PC to Access the Router's Web Based Management.....	5
3 Checking PC's IP and Connection with the Router.....	12
4 Accessing the Web-Based Configuration Utility.....	13
5 Quick Configuration for Wireless Router	14
6 Checking the Connection to the Internet	17
User's Manual	18
Chapter 1 Introduction	19
1.1 Welcome	19
1.2 About This Guide	19
1.3 Copyright statement	19
Chapter 2 Designing Your Wireless Network	20
2.1 System Requirements	20
Chapter 3 Getting to Know the Wireless-G Broadband Router	21
3.1 Back Panel.....	21
3.2 LED Description.....	22
Chapter 4 hardware connection.....	23
4.1 Connecting the Wireless Broadband Router	23
Chapter 5 Configuring Local PC to Access the Wireless Router	24
5.1 Setting up TCP/IP	24
5.1.1 Windows 98/Me.....	24
5.1.2 Windows 2000	24
5.1.3 Windows XP.....	27
5.2 Additional Settings for Wireless Client.....	30
5.3 Checking PC's IP and Connection with the Router	31
Chapter 6 Web Configuration.....	33
6.1 Logging In	33
6.2 Quick Setup Wizard	34
6.3 Status.....	37
6.3.1 System Status	37
6.3.2 Statistics	41
6.4 WAN Setup.....	41
6.4.1 Dynamic IP Address	41
6.4.2 PPPoE	42
6.4.3 Static IP	44
6.5 LAN Setup	45
6.5.1 Lan Setup.....	45
6.5.2 DHCP Info	46
6.6 Wireless Settings.....	46
6.6.1 Basic Wireless Settings.....	46
6.6.2 Advanced Wireless Settings.....	47
6.6.3 Wireless Security	48
6.6.4 Wireless MAC Filter	53
6.6.5 Association Table.....	54

6.6.6 WDS Set	54
6.7 Routing	55
6.8 NAT	55
6.8.1 DMZ Host Setup	56
6.8.2 FTP Private Port.....	56
6.8.3 Virtual Server Setup.....	57
6.8.4 Port Tiger	58
6.9 Fire Wall.....	59
6.9.1 MAC Filtering	59
6.9.2 Access Control	60
6.9.3 URL Filtering	62
6.10 DDNS.....	62
6.11 MISC.....	63
6.11.1 Login ID & Password Setup	63
6.11.2 Remote Mgmt.....	64
6.11.3 WAN Link Status & Setup	64
6.11.4 Restore Default / Restart System	64
6.11.5 Firmware Upgrade	65
Appendix I : Troubleshooting	66
Appendix II: Specification	69

X11

Wireless Broadband Router

Quick Installation Guide



This Quick Installation Guide only provides you some basic instructions. For more detailed information, please refer to the User Manual.

① Connecting the Wireless Broadband Router

Prior to connecting the hardware, make sure to power off your ethernet device, Cable/ADSL modem and X11 Wireless Broadband Router. Then follow the steps below to connect the related devices.

Step 1 Connecting your computer to the LAN port.

Attach one end of the Ethernet cable with RJ-45 connector to your hub, switch or a computer's Ethernet port, and the other end to one of the LAN ports of your Wireless Broadband Router.

Step 2 Connecting Cable/ADSL Modem to the WAN port.

Connect the Ethernet cable attaching to your Cable/ADSL modem to the **WAN** port of your Wireless Broadband Router.


Step 3 Connecting the power adapter.

Connect the single DC output connector of the power adapter to the power jack on the side of the Wireless Broadband Router. Then plug the Power Adapter into an AC outlet,

Step 4 Power on the following devices in this order:

Cable/ADSL modem, Router, and PCs

The figure below illustrates a connection example:

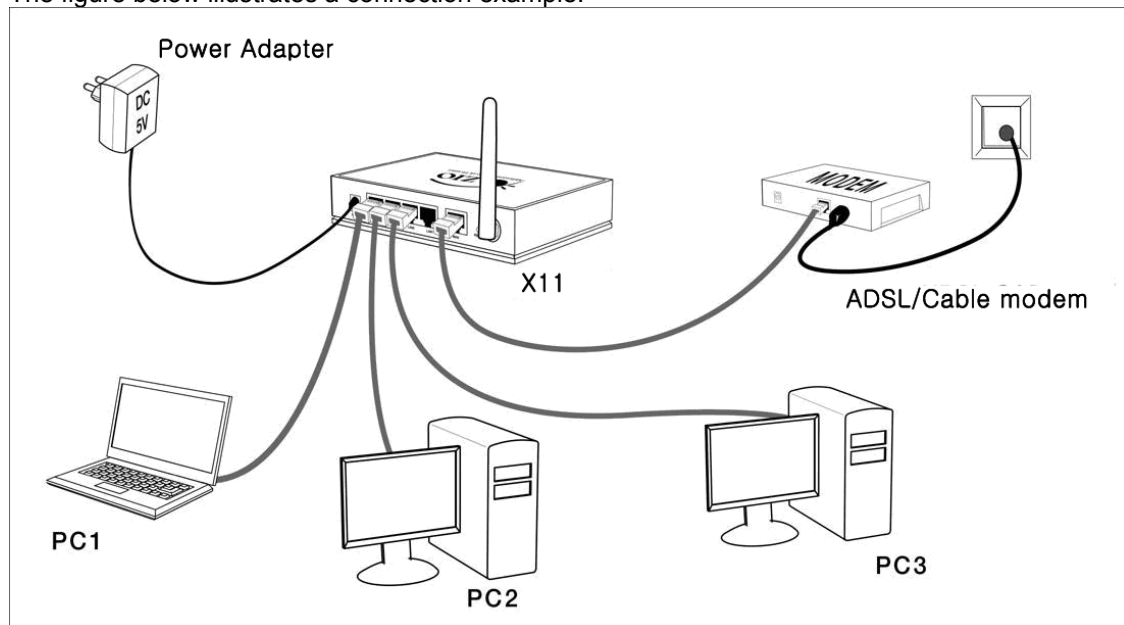

② Setting Up PC to Access the Router's Web Based Management

You can manage the Wireless Broadband Router through the Web browser-based configuration utility. To configure the device via Web browser, at least one properly configured computer must be connected to the device via Ethernet or wireless network. The Wireless Broadband Router is configured with the **default IP address of 192.168.10.1** and **subnet mask of 255.255.255.0**, and its **DHCP server is enabled** by default. Before setting up the Router, make sure your PCs are configured to obtain an IP

(or TCP/IP) address automatically from the Router by the steps below.

Windows 98/Me

1. Go to **Start** → **Settings** → **Control Panel**.
2. Find and double-click the Network icon. The Network dialog box appears.
3. Click the Configuration label and ensure that you have network card.
4. Select TCP/IP. If TCP/IP appears more than once, please select the item that has an arrow "→" pointing to the network card installed on your computer. DO NOT choose the instance of TCP/IP with the words "Dial Up Adapter" beside it.
5. Click Properties. The TCP/IP Properties dialog box appears.
6. Ensure the Obtain IP Address Automatically is checked.
7. From the WINS Configuration dialog box, Ensure that Disable WINS Resolution is checked.
8. From the Gateway dialog box, remove all entries from the Installed gateways by selecting them and clicking Remove.
9. From the DNS Configuration dialog box, remove all entries from the DNS Server Search Order box by selecting them and clicking Remove. Remove all entries from the Domain Suffix Search Order box by selecting them and clicking Remove. Click Disable DNS.
10. Click OK, back to Network Configuration dialog box
11. Click OK, if prompted to restart, click YES.

Windows 2000

Please follow the steps below to setup your computer:

1. Go to Start → Settings → Control Panel

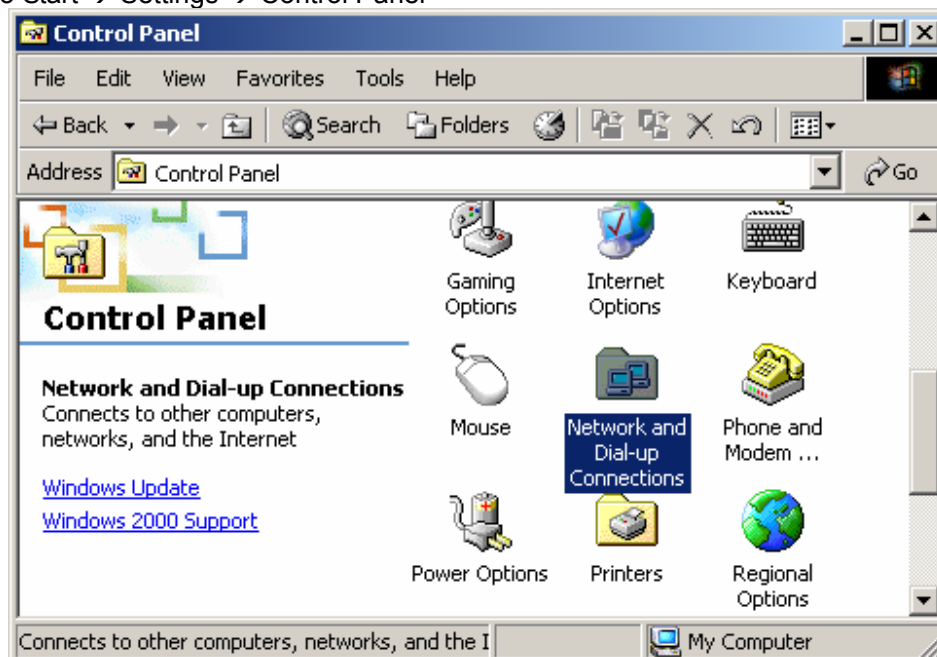


Figure 2

2. Double click the icon Network and Dial-up Connections
3. Highlight the icon Local Area Connection, right click your mouse, Click Properties

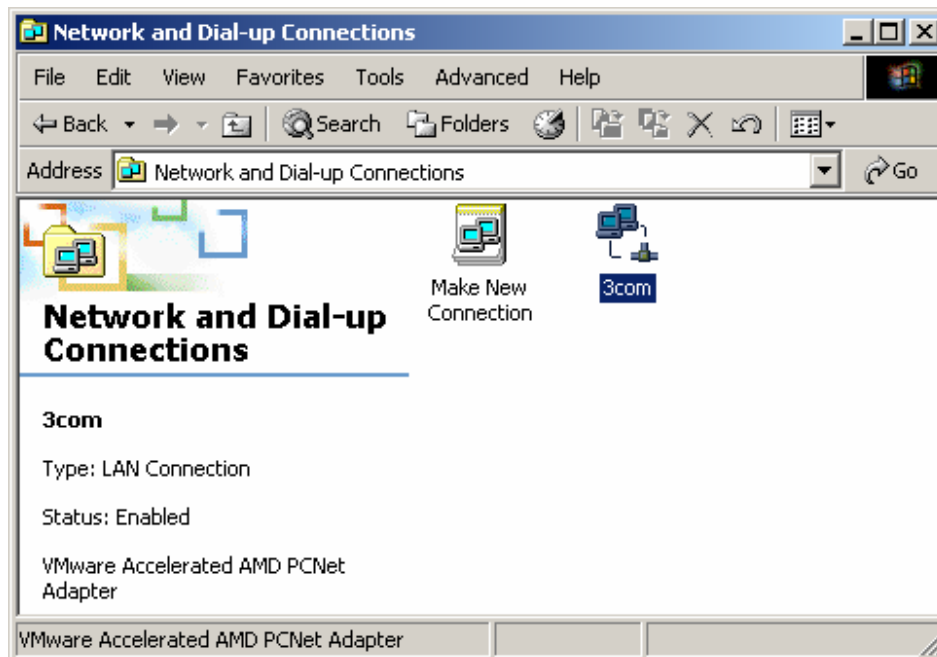


Figure 3

4. Highlight Internet Protocol (TCP/IP), and then press Properties button

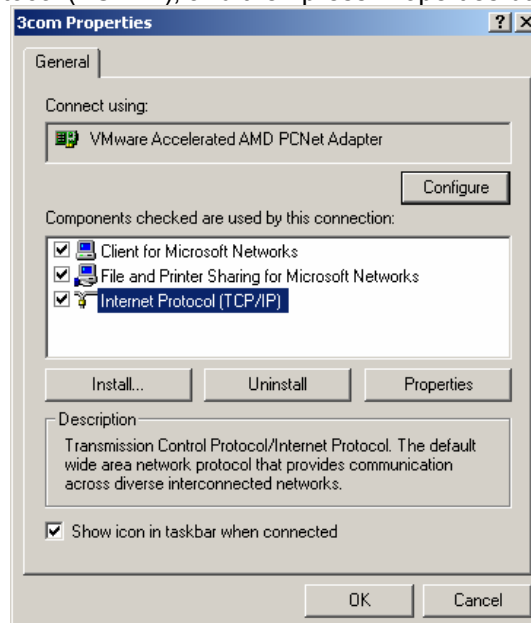


Figure 4

5. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

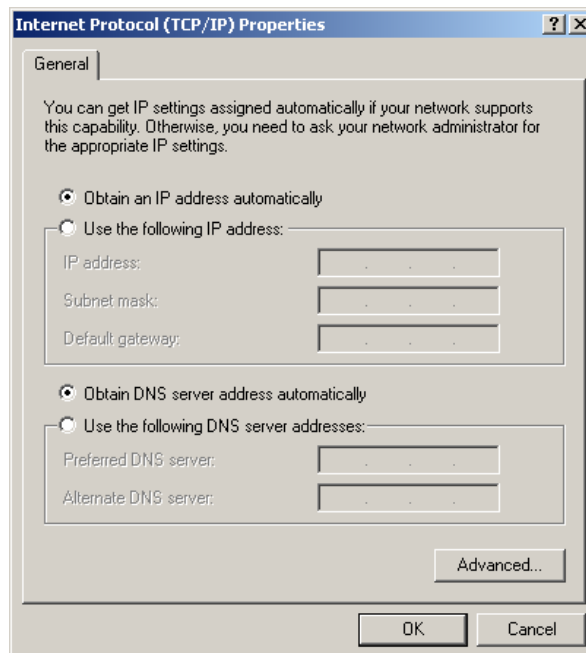


Figure 5

6. Press OK to close the Local Area Connection Properties window

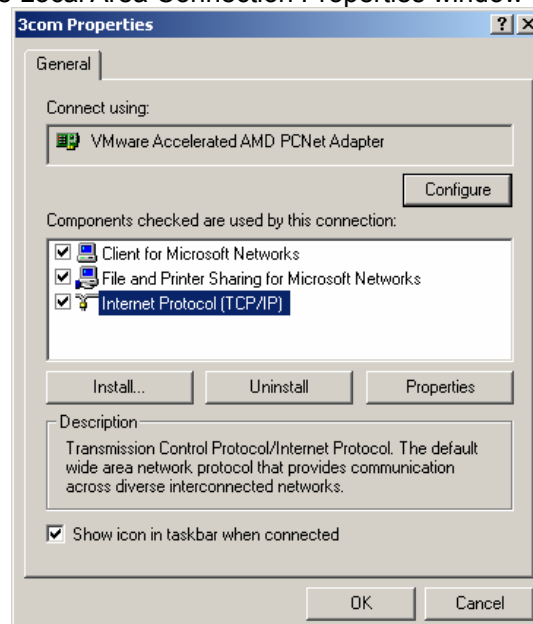


Figure 6

Windows XP

Please follow the steps below to setup your computer:

1. Go to Start → Settings → Control Panel
2. Click Network and Internet Connections

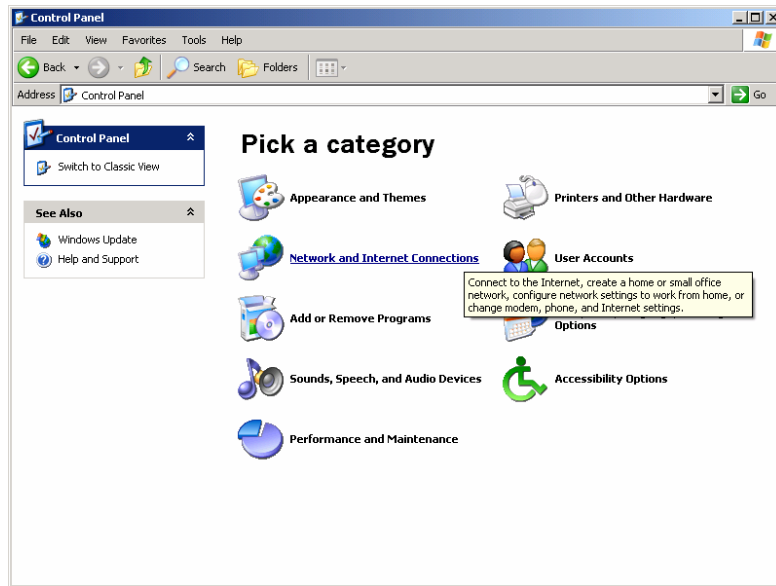


Figure 7

3. Click Network Connections

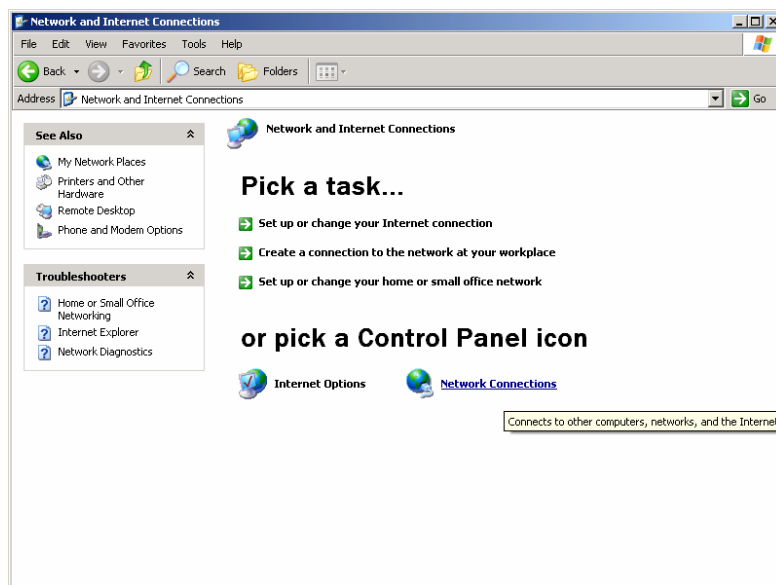


Figure 8

4. Highlight the icon Local Area Connection, right click your mouse, Click Properties

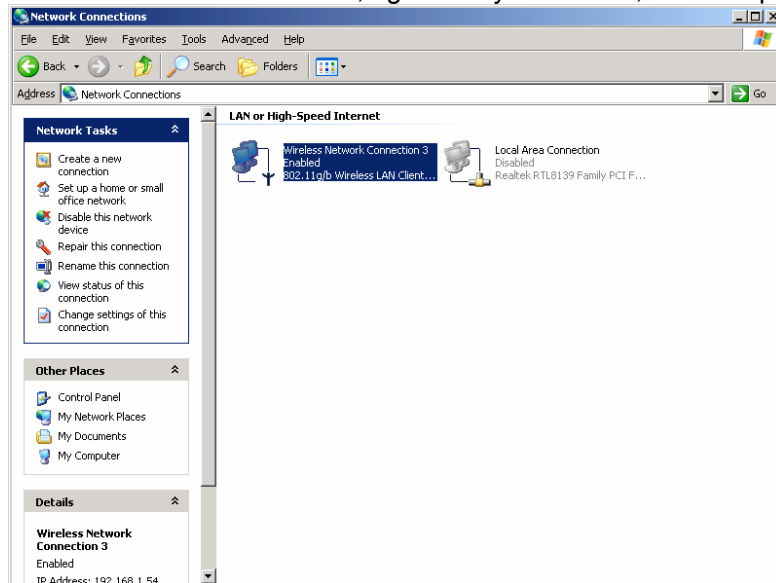


Figure 9

5. Highlight Internet Protocol (TCP/IP), and then press Properties button

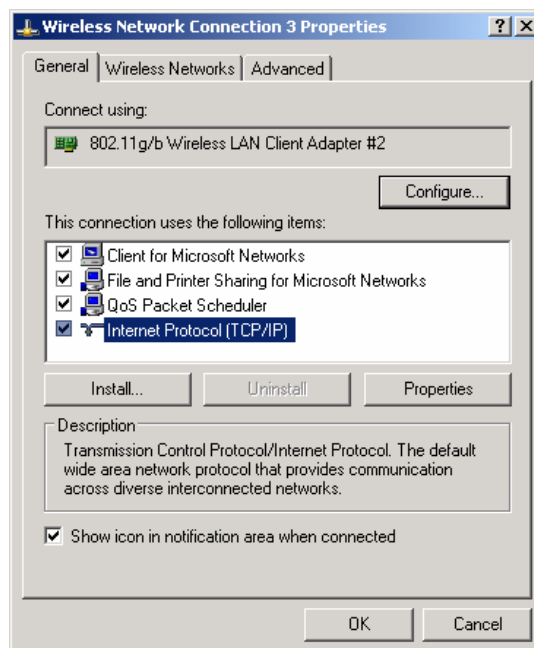


Figure 10

6. Choose Obtain an IP address automatically and Obtain DNS server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

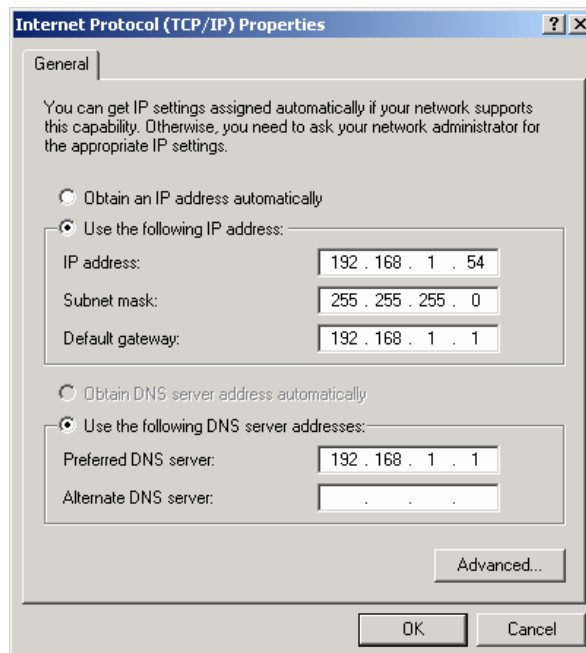


Figure 11

7. Press OK to close the Local Area Connection Properties window

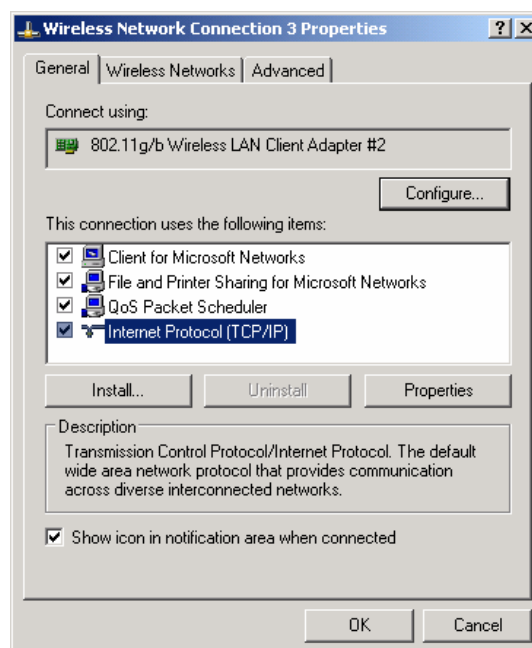



Figure 12

③ Checking PC's IP and Connection with the Router

After configuring the TCP/IP protocol, use the ping command to verify if the computer can communicate with the Router. To execute the ping command, open the DOS window and ping the IP address of the Wireless Broadband Router at the DOS prompt:

To execute ping command, open the DOS window by clicking on **Start -> Run**. In the Run window, type **CMD**. At the DOS prompt, type the following command:

If the Command window returns something similar to the following:

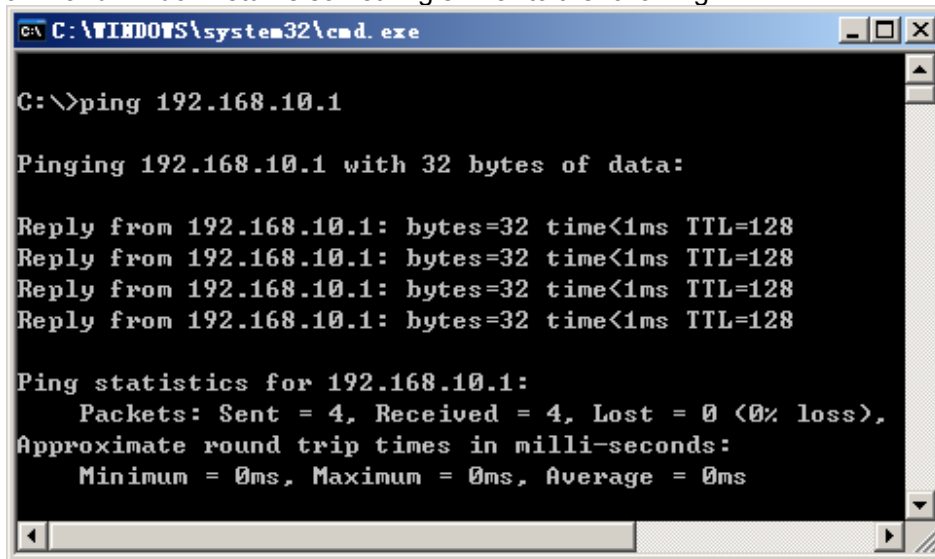

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 192.168.10.1

Pinging 192.168.10.1 with 32 bytes of data:


Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.10.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Figure 13

Then the connection between the router and your computer has been successfully established.

If the computer fails to connect to the router, the Command window will return the following:

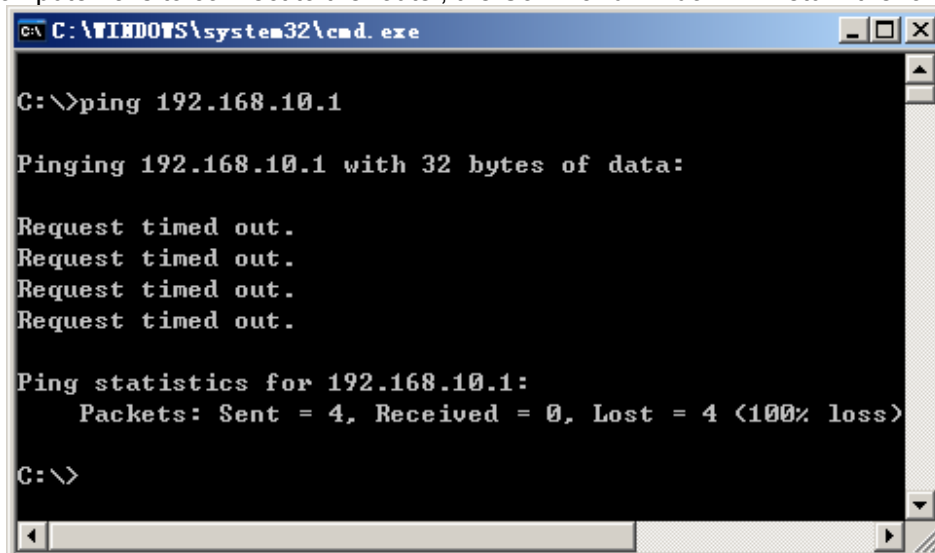

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 192.168.10.1

Pinging 192.168.10.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.10.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss)

C:\>
```

Figure 14

Verify your computer's network settings are correct and check the cable connection between the router and the computer.

④ Accessing the Web-Based Configuration Utility

Step 1 Launch the Web browser and type **http://192.168.10.1** in the Address field and click **Enter**.

Step 2 After connecting to the device, you will be prompted to enter the username and password. Type **admin** in the User Name field, the default password is **N/A**.

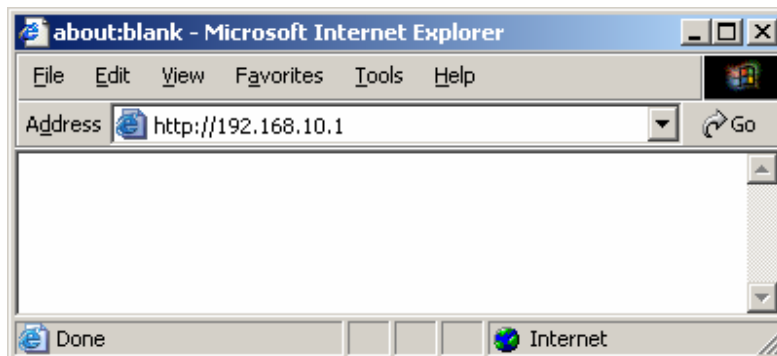


Figure 15

⑤ Quick Configuration for Wireless Router

After login, the Wireless Broadband Router's web-based management is accessible.

Step 1 Click the **WAN Setup** page link to configure the WAN interface.

The screenshot displays the web management interface of a Wireless Broadband Router (WLB5254AIP / X11). The interface has a green header with the router's name and a ZIO logo. On the left, a sidebar contains navigation buttons: Status, WAN Setup, LAN Setup, Wireless, Routing, NAT, Firewall, DDNS, and MISC. The main content area is titled 'WAN Status' and includes a 'Status' tab and a 'Statistics' tab. Below the tabs, there are buttons for 'Wizard', 'Save', and 'Help'. The 'WAN Status' section contains a table with the following data:

Connection Type	DHCP
Physical Address	08-10-17-00-4e-44
DHCP Lease timer	3600 Sec Lease timer 3480
WAN IP Address	10.10.10.102
Subnet Mask	255.255.255.0
Default Gateway	10.10.10.22
Primary DNS IP	10.10.10.20
Secondary DNS IP	0.0.0.0

Below the table, it states 'This page will be refreshed per 10 seconds' and includes a 'Disconnect' button. The 'LAN Status' section contains a table with the following data:

Physical Address	08-10-17-00-4e-43
LAN IP Address	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	ON

The 'Wireless Status' section contains a table with the following data:

Wireless	Enabled
Connection	Disconnected
MAC	08-10-17-00-4e-43
Radio Band	802.11b/g
SSID	Ukhan
Channel	10
Mode	AP
Security	None

The 'SYSTEM INFO' section contains a table with the following data:

Edition Info	APR-M14H-V1.1.49EN-SDT(WLB5254AIPX11), 2007.03.23.16:35.
--------------	--

At the bottom, a copyright notice states: 'All contents are Copyright 2005- SDT Information Technology Co. LTD, Inc All rights reserved.'

Figure 16

Step 2. Select the Internet connection type

The **WAN Setup** page configures the Internet connection of the Wireless Broadband Router. Consult your ISP if you are unsure about which Internet connection type to use. Select the correct protocol for your ISP from the table below. See the User Manual for more information.

- **Dynamic IP Address**

DHCP Client Setup

MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1496"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
<input type="button" value="Apply"/>		

Figure 17

● **PPPoE****PPPoE Setup**

PPPoE Account	<input type="text"/>	
PPPoE Password	<input type="text"/>	
MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1410"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
<input checked="" type="radio"/> Connect to Internet automatically (Default)		
<input type="radio"/> Auto disconnect when idle, time out After <input type="text"/> (1-30)minutes, if no found the access request then auto-break off!		
<input type="radio"/> Connect to Internet manually		
<input type="button" value="Apply"/>		

Figure 18

● **Static IP**

Static IP Setup

WAN IP Address	<input type="text" value="10.10.10.102"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>	
Default Gateway	<input type="text" value="10.10.10.22"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1496"/>	
<input type="button" value="Apply"/>		

Figure 19

Step 3.After selecting the proper WAN connection setting, click **Apply** to save And enable these settings with the Router.

Step 4.Setting the wireless

With the default values, the router (Access Point) can be easily associated by a wireless client. For security concern, you should modify the basic Wireless LAN security settings. For more detailed information, please refer to the User Manual.

Basic Setting

<input type="checkbox"/> Disabled Wireless		<input type="button" value="Apply"/>
Radio Band	<input type="text" value="802.11b/g"/> ▼	
Radio Mode	<input type="text" value="AP"/> ▼	
Booster Mode	<input type="checkbox"/> Enabled this mode can enhance the throughput of data transmission.	
After configing basic parameters,Please config Authentication and Encryption mode,to setup Valid and Safe wireless connection.		
SSID	<input type="text" value="Ukhan"/>	
Broadcast SSID	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled	
Region	<input type="text" value="Default(CH 1-13)"/> ▼	
Channel	<input type="text" value="Channel 10"/> ▼	
<input type="button" value="Apply"/>		

Figure 20

Wireless Router's Default Values	
LAN IP	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	Enable
IP Lease Range	192.168.10.2 ~ 192.168.10.128
User Name	admin
Password	N/A
SSID	default
Channel	6
Authentication	Disabled
Encryption	Off
Radio Band	802.11B/G

⑥ Checking the Connection to the Internet

To check the connection to the Internet, you can open the Web browser and go to a website. You can also go to the System Overview page of the router's Web -based configuration utility. The WAN Interface group will display the current connection information.

Congratulations! You've successfully configured your Router.

11

Wireless Broadband Router

User's Manual



Chapter 1 Introduction

1.1 Welcome

Congratulations on purchasing ZIO X11 Wireless Broadband Router. ZIO X11 is a cost-effective IP Sharing Router that enables multiple users to share the Internet through an ADSL or cable modem. Simply configure your Internet connection settings in the Wireless Broadband Router and plug your PC to the LAN port and you're ready to share files and access the Internet. As your network grows, you can connect another hub or switch to the router's LAN ports, allowing you to easily expand your network. X11 is embedded with an IEEE 802.11g/b access point that allows you to build up a wireless LAN. With the support of new emerged 802.11g standard, the access point provides data transfer of up to 54Mbps, up to 5 times faster than 802.11b, it is backwards compatible with existing 802.11b infrastructure while migrating to the new screaming fast 802.11g. The Wireless Broadband Router provides a total solution for the Small and Medium-sized Business (SMB) and the Small Office/Home Office (SOHO) markets, giving you an instant network today, and the flexibility to handle tomorrow's expansion and speed.

1.2 About This Guide

This User Manual contains information on how to install and configure your Wireless Broadband Router to get your network started accessing the Internet. It will guide you through the correct configuration steps to get your device up and running.

Note and Caution in this manual are highlighted with graphics as below to indicate important information.



Contains related information corresponds to a topic.



Necessary steps, actions, or messages that should not be ignored.

1.3 Copyright statement

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, whether electronic, mechanical, photocopying, recording, or otherwise without the prior writing of the publisher.

Chapter 2 Designing Your Wireless Network

2.1 System Requirements

- Cable/ADSL modem and an Internet access account for Internet connection
- One computer with 10/100Base-T Ethernet card and TCP/IP protocol installed for initial setup
- Internet Explorer 5.0 or higher for Web configuration
- 802.11g or 802.11b compliant wireless adapters (for wireless connection)

Figure 1 below shows a typical setup for a Local Area Network (LAN).

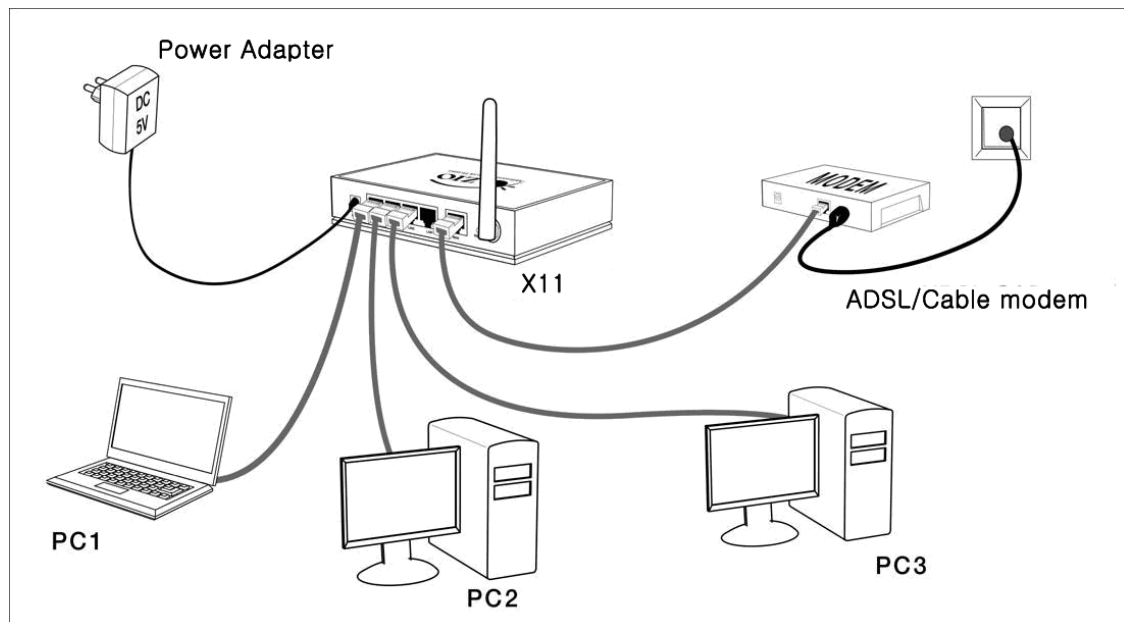


Figure 1 Local Area Network

Chapter 3 Getting to Know the Wireless-G Broadband Router

The following sections describe the physical characteristics of your router.

3.1 Back Panel

The following illustration shows the X11 back panel:

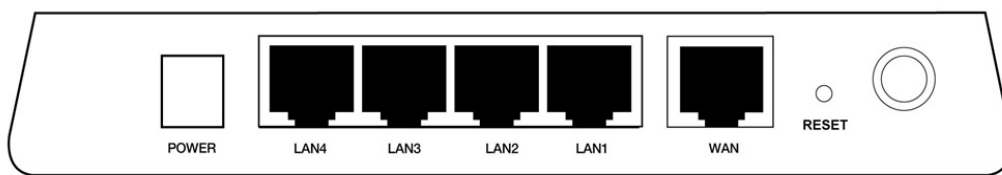


Figure 2 back panel

Power: The receptacle where you plug in the power adapter.

LAN Ports 1-4: These four ports connect the router to your LAN or home network using Ethernet cables. This enables communication among clients, such as PCs, on the network. The LAN ports support either 10-BASE-T or 100-BASE-T transmission speeds as well as straight-through and crossover Ethernet cables. Any of these four ports can also serve as an uplink port to other network devices, such as another router or switch, which allows you to extend your network.

WAN: Connect your modem to your router using this port with your supplied Ethernet cable. This is the only port you can use for this procedure. This enables your router to access the Internet. The port supports 10/100 Mbps as well as straight-through and crossover Ethernet cables.

Reset button: Resets your router or resets the router to the default login settings.

Antenna: The antenna used for wireless connections. You are able to rotate the antenna to gain the best signal reception.



If the router experiences trouble connecting to the Internet, briefly press and release the Reset button to reset the router. To reset the router to the factory defaults, press and hold the Reset button for more than five seconds. This clears the router's user settings, including User ID, Password, IP Address, and Subnet mask. (Warning: your original configurations will be replaced with the factory default settings)

3.2 LED Description

The following illustration shows the X11 front panel:

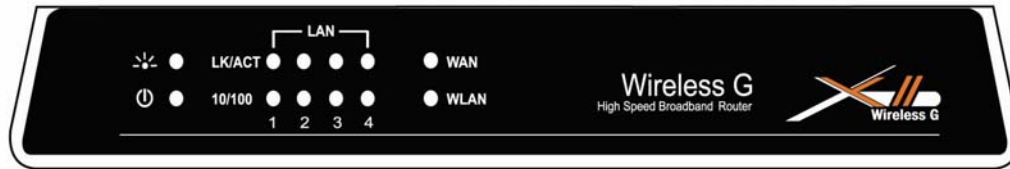


Figure 3 front panel

Number	LED	Light Status	Description
1	Power	ON	This indicator lights when the Wireless Router is receiving power; otherwise, it is off.
2	Status	ON	The LED will be dark for a few seconds when the system is started. After that, the LED will stay green to show the Wireless Router is working normally. If the LED stays blink/dark that means the system failed, you need to contact your agent or try to reboot the system.
3	LK/ACT	Flashing	Wireless LAN has Activity (ACT) data being sent.
4	10/100	On	Lan has activity with 100Mbps
		Off	LAN activity with 10Mbps
5	WAN	ON	WAN is connected
		Off	No WAN connection
		Flashing	WAN port has Activity (ACT), data being sent
6	LAN(1-4)	ON	WAN is connected
		Off	No WAN connection
		Flashing	WAN port has Activity (ACT), data being sent

Chapter 4 hardware connection

Begin by finding a good place to set up your wireless broadband. Some things to consider:

- Keep the access point as central in your work area as possible. Signal strength and speed fall off with distance.
- Higher is often better. For instance, set it up on the top shelf of a bookcase rather than the bottom one, if possible.

4.1 Connecting the Wireless Broadband Router

Prior to connecting the hardware, make sure to power off your Ethernet device, Cable/ADSL modem and Wireless Broadband Router. Then follow the steps below to connect the related devices.

Step 1: Connecting your computer to the LAN port.

Attach one end of the Ethernet cable with RJ-45 connector to your hub, switch or a computer's Ethernet port, and the other end to one of the LAN ports of your Wireless Broadband Router.

Step 2: Connecting Cable/ADSL Modem to the WAN port.

Connect the Ethernet cable attaching to your Cable/ADSL modem to the WAN port of your Wireless Broadband Router.

Step 3: Connecting the power adapter.

Connect the single DC output connector of the power adapter to the power jack on the side of the Wireless Broadband Router. Then plug the Power Adapter into an AC outlet,

Step 4: Power on the following devices in this order: Cable/ADSL modem, Router, and PCs.

Chapter 5 Configuring Local PC to Access the Wireless Router

You can manage the Wireless Broadband Router through the Web browser-based configuration utility. To configure the device via Web browser, at least one properly configured computer must be connected to the device via Ethernet or wireless network. The Wireless Broadband Router is configured with the default IP address of 192.168.10.1 and subnet mask of 255.255.255.0 and its DHCP server is enabled by default. Before setting up the Router, make sure your PCs are configured to obtain an IP (or TCP/IP) address automatically from the Router by the steps below.

5.1 Setting up TCP/IP

5.1.1 Windows 98/Me

Step 1: Go to Start → Settings → Control Panel.

Step 2: Find and double-click the Network icon. The Network dialog box appears.

Step 3: Click the Configuration label and ensure that you have network card.

Step 4: Select TCP/IP. If TCP/IP appears more than once, please select the item that has an arrow "→" pointing to the network card installed on your computer. DO NOT choose the instance of TCP/IP with the words "Dial Up Adapter" beside it.

Step 5: Click Properties. The TCP/IP Properties dialog box appears.

Step 6: Ensure the Obtain IP Address Automatically is checked.

Step 7: From the WINS Configuration dialog box, Ensure that Disable WINS Resolution is checked.

Step 8: From the Gateway dialog box, remove all entries from the Installed gateways by selecting them and clicking Remove.

Step 9: From the DNS Configuration dialog box, remove all entries from the DNS Server Search Order box by selecting them and clicking Remove. Remove all entries from the Domain Suffix Search Order box by selecting them and clicking Remove. Click Disable DNS.

Step 10: Click OK, back to Network Configuration dialog box

Step 11: Click OK, if prompted to restart, click YES.

5.1.2 Windows 2000

Please follow the steps below to setup your computer:

Step 1: Go to Start → Settings → Control Panel

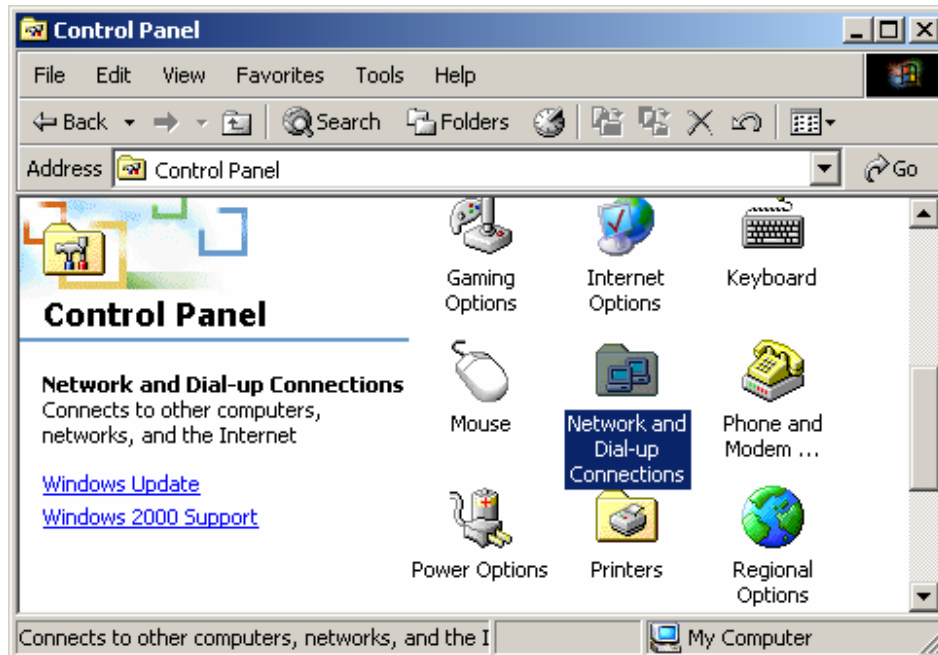


Figure 4

Step 2: Double click the icon Network and Dial-up Connections

Step 3: Highlight the icon Local Area Connection, right click your mouse, Click Properties

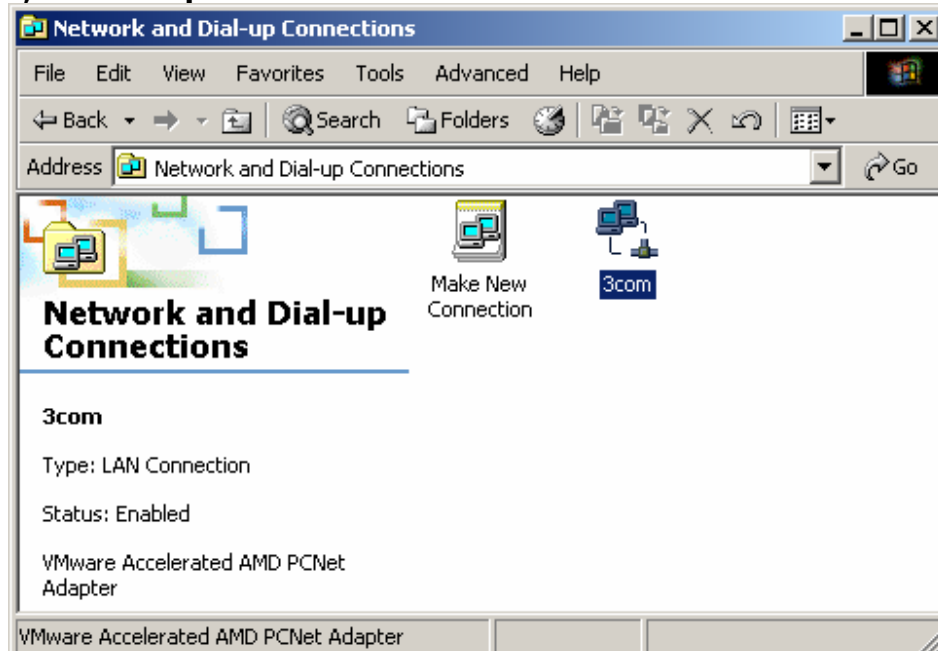


Figure 5

Step 4: Highlight Internet Protocol (TCP/IP), then press Properties button

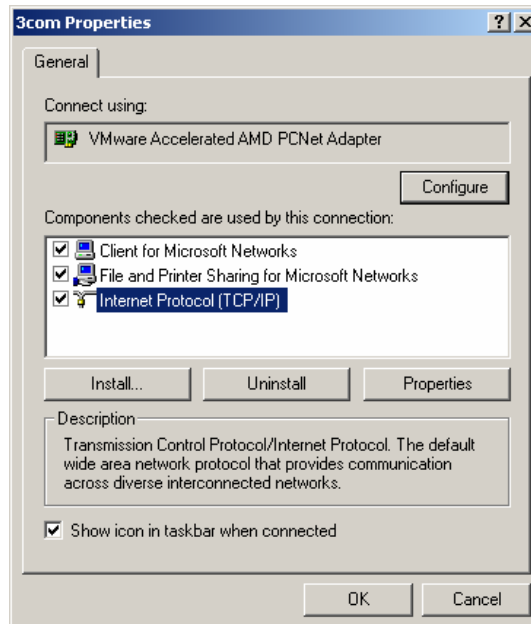


Figure 6

Step 5: Choose Obtain an IP address automatically and Obtain DNS Server Address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window.

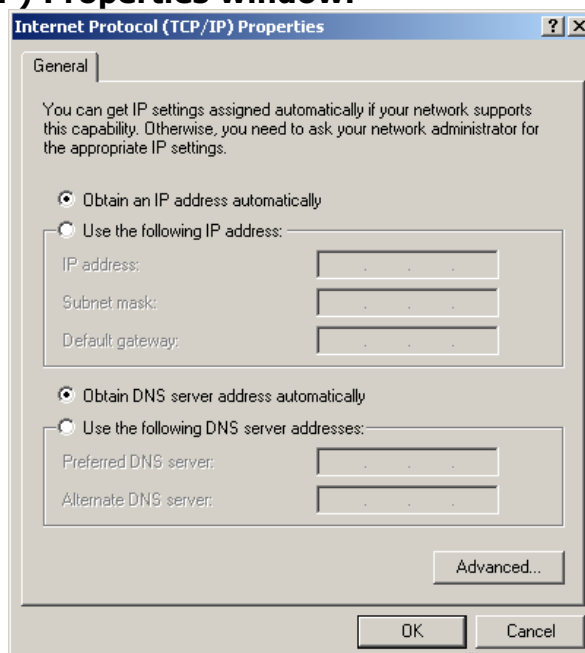


Figure 7

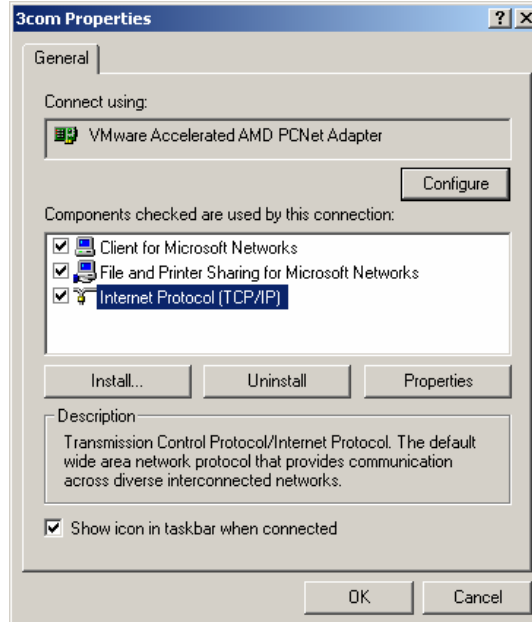
Step 6: Press OK to close the Local Area Connection Properties window

Figure 8

5.1.3 Windows XP

Please follow the steps below to setup your computer:

Step 1: Go to Start → Settings → Control Panel

Step 2: Click Network and Internet Connections

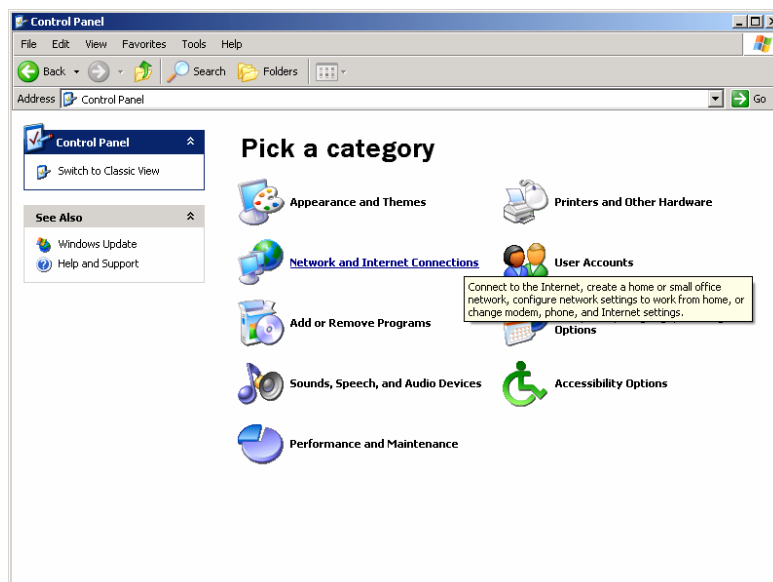


Figure 9

Step 3: Click Network Connections

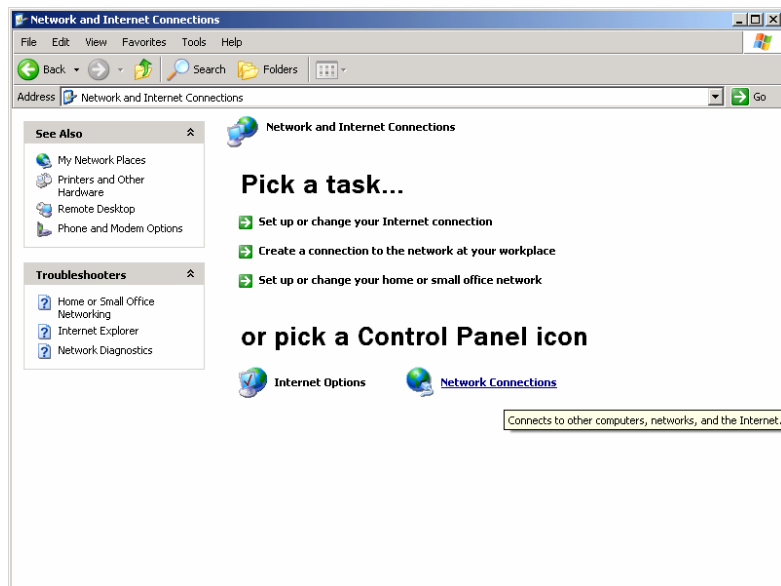


Figure 10

Step 4: Highlight the icon Local Area Connection, right click your mouse, Click Properties

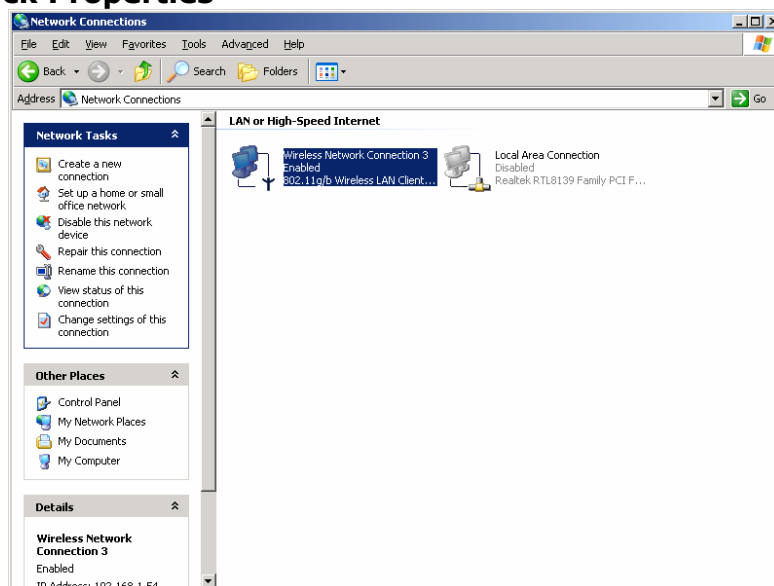


Figure 11

Step 5: Highlight Internet Protocol (TCP/IP), then press Properties button

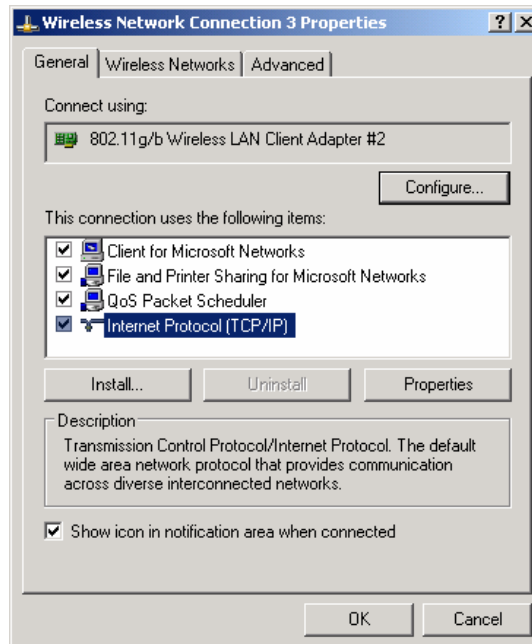


Figure 12

Step 6: Choose Obtain an IP address automatically and Obtain DNS Server address automatically, and then press OK to close the Internet Protocol (TCP/IP) Properties window

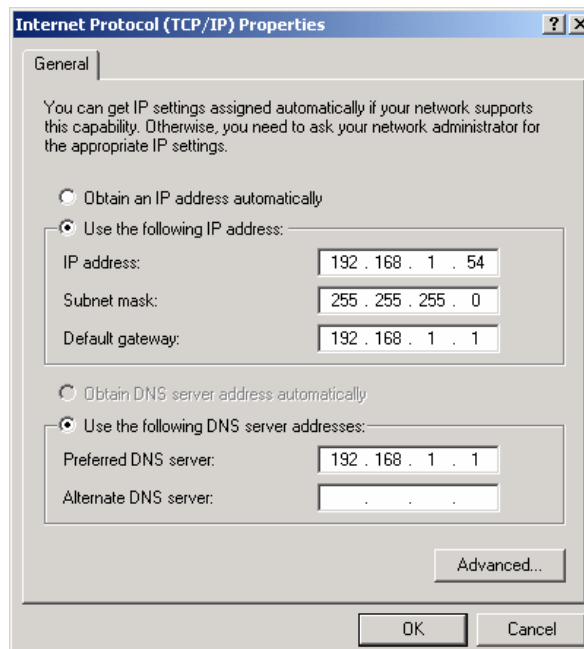


Figure 13

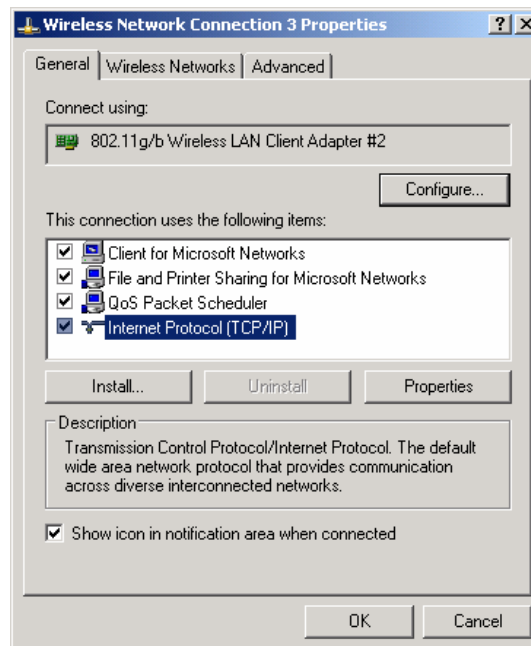
Step 7: Press OK to close the Local Area Connection Properties window

Figure 14

5.2 Additional Settings for Wireless Client

If you chose to access the router via a wireless client, also verify the following:

Step 1: Make sure your PC is equipped with 802.11g or 802.11b wireless adapter and has appropriate WLAN card driver/utility and TCP/IP installed.

Step 2: Set the wireless adapter to use appropriate TCP/IP settings as described in previous section.

Step 3: Launch the wireless adapter's provided utility and verify that your wireless client is configured with these settings:

- Operation Mode: Infrastructure
- SSID: default
- Authentication: Disabled
- Encryption: Off
- Radio Band: 802.11B/G



If you only finished the wireless settings and didn't configure the wireless adapter's TCP/IP settings, even your link status indicates a successful connection with the AP. This connection applies to the "physical" network layer only. Your wireless adapter cannot communicate with the AP. Make sure to set the TCP/IP properties as described in this previous section.


5.3 Checking PC's IP and Connection with the Router

After configuring the TCP/IP protocol, use the ping command to verify if the computer can communicate with the Router. To execute the ping command, open the DOS window and PING the IP address of the Wireless Broadband Router at the DOS prompt:

- For Windows 98/Me: Start -> Run. Type "**command**" and click OK.
- For Windows 2000/XP: Start -> Run. Type "**cmd**" and click OK.

At the DOS prompt, type the following command:

If the Command window returns something similar to the following:

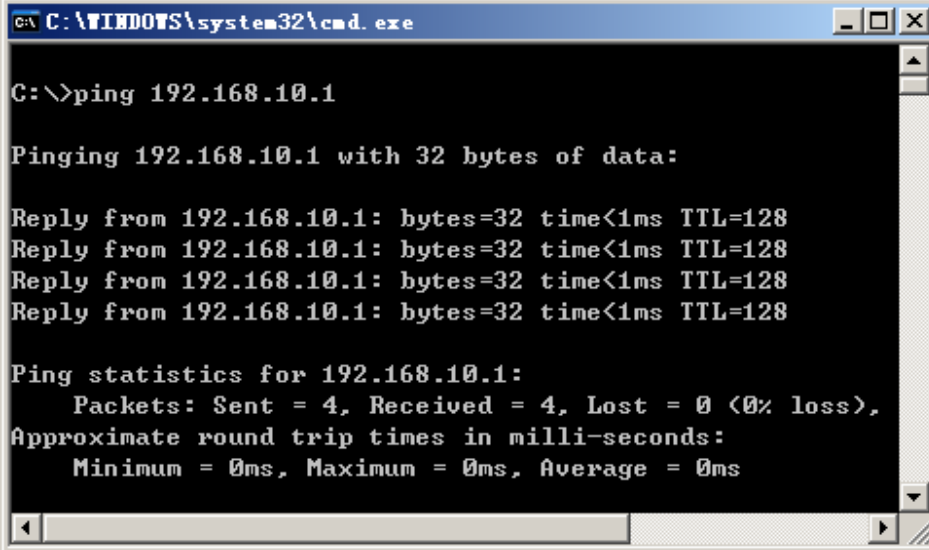

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 192.168.10.1

Pinging 192.168.10.1 with 32 bytes of data:


Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128
Reply from 192.168.10.1: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.10.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

Figure 15

Then the connection between the router and your computer has been successfully established.

If the computer fails to connect to the router, the Command window will return the following:

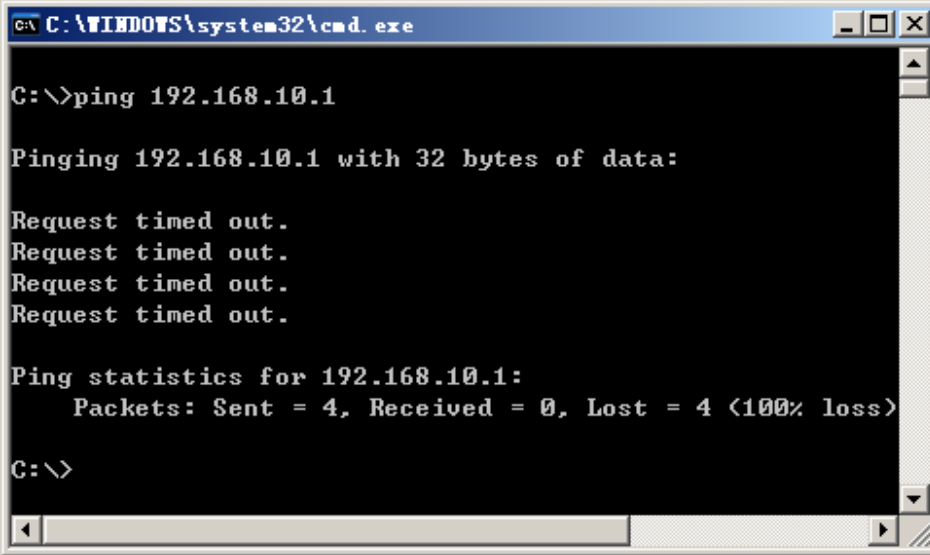

```
C:\WINDOWS\system32\cmd.exe

C:\>ping 192.168.10.1

Pinging 192.168.10.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.10.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss)

C:\>
```

Figure 16

Verify your computer's network settings are correct and check the cable connection between the router and the computer.

Chapter 6 Web Configuration

6.1 Logging In

In order to make the whole network operate successfully, it is necessary to configure the Wireless Router through your computer has a WEB browser installed. Please follow up the steps listed below.

Step 1: Start your Web browser and type **http://192.168.10.1** in the Address field. This address is the default private IP of your router.

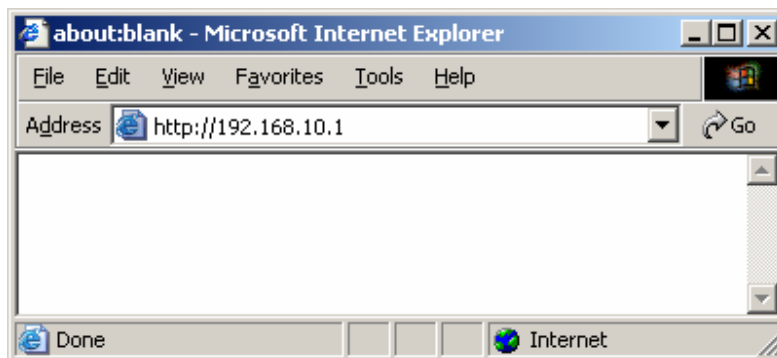


Figure 17



If the router's LAN port has been changed with new IP address, enter the new IP address instead.

Step 2: After Pressing Enter, you will be able to see the Wireless Broadband Router's web-based configuration utility. From now on the Wireless Broadband Router acts as a Web server sending HTML pages/forms at your request. You can click the menu options at the left to start the configuration task.



Don't forget to change the Password in configuration's Authentication to ensure the security. When first configuring your router, it is recommended that you have an Ethernet cable connected to the router. Performing the INITIAL configuration using a wireless connection is not secure and is not recommended. After you have finished the initial configuration of the router, your connection will be secure and you can safely use either a wired or wireless connection.

In the home page of the Wireless Router, the left navigation bar shows the main

options to configure the system. In the right navigation screen is the summary of system status for viewing the configurations. You can usually get context sensitive help by clicking on the Help link at the top right of the page.

Wireless Broadband Router
Wireless Broadband Router

WLB5254AIP / X11

WLB5254AIP/X11

Status Statistics Wizard Save Help

WAN Status

Connection Type	DHCP
Physical Address	08-10-17-00-4e-44
DHCP Lease timer	3600 Sec Lease timer 3480
WAN IP Address	10.10.10.102
Subnet Mask	255.255.255.0
Default Gateway	10.10.10.22
Primary DNS IP	10.10.10.20
Secondary DNS IP	0.0.0.0

This page will be refreshed per 10 seconds [Disconnect](#)

LAN Status

Physical Address	08-10-17-00-4e-43
LAN IP Address	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	ON

Wireless Status

Wireless	Enabled
Connection	Disconnected
MAC	08-10-17-00-4e-43
Radio Band	802.11b/g
SSID	Ukhan
Channel	10
Mode	AP
Security	None

SYSTEM INFO

Edition Info	APR-M14H-V1.1.49EN-SDT(WLB5254AIPX11), 2007.03.23.16:35.
--------------	--

All contents are Copyright 2005- SDT Information Technology Co. LTD, Inc All rights reserved.

Figure 18



To apply any settings you've altered on any page, click the Save button. Otherwise you change settings would be lost after the Router reboot.

6.2 Quick Setup Wizard

The Quick Setup section is designed to get you using the broadband router as quickly as possible. In the Quick Setup you are required to fill in only the information necessary to access the Internet.

Step 1: Click on the Wizard in the HOME page, you should see the screen below

then click on "Start".



Figure 19

Step 2: Select your Internet connection type and then input the configurations needed to connect to your Internet Service Provider (ISP)

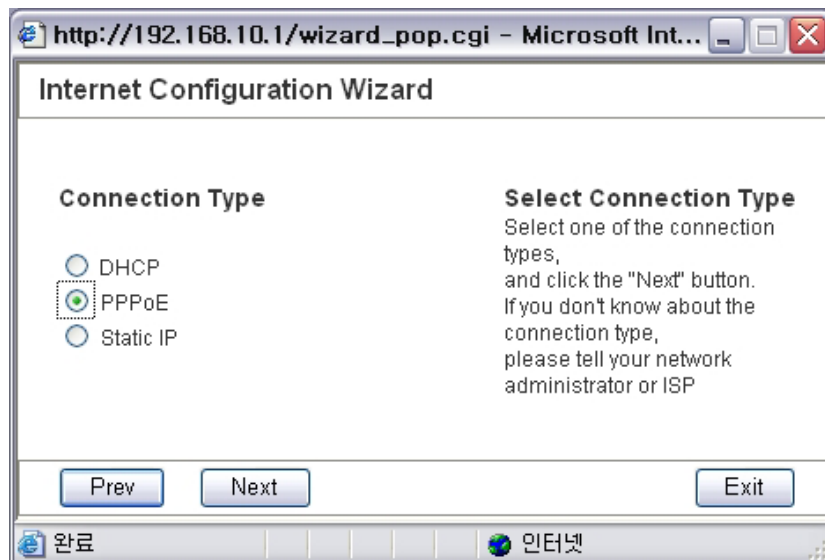


Figure 20

For Dynamic IP Address

- Choose DHCP if your ISP will automatically give you an IP address. And then click on "Next".

For PPPoE

- Select PPPoE if your ISP requires the PPPoE protocol to connect you to the

Internet. Your ISP should provide all the information required in this section.

- Enter the User Name and Password provided by your ISP for the PPPoE connection then click on "Next".




The screenshot shows a web browser window with the address bar displaying 'http://192.168.10.1/wizard_wan_mode.cgi - Micr...'. The main content area is titled 'Internet Configuration Wizard'. It is divided into two columns. The left column is titled 'PPPoE Account & Password' and contains two input fields: 'PPPoE Account' and 'PPPoE Password'. The right column is titled 'Set PPPoE Account & Password' and contains the text 'Set PPPoE account & password which are supplied from your ISP'. At the bottom of the form, there are three buttons: 'Prev', 'Next', and 'Exit'. The browser's status bar at the bottom shows '완료' (Complete) and '인터넷' (Internet).

Figure 21

For Static IP

- Select Static IP if your ISP has given you a specific IP address for you to use. Your ISP should provide all the information required in this section.
- Fill the blank input box with the values which are supplied from your ISP And then click on "Next".

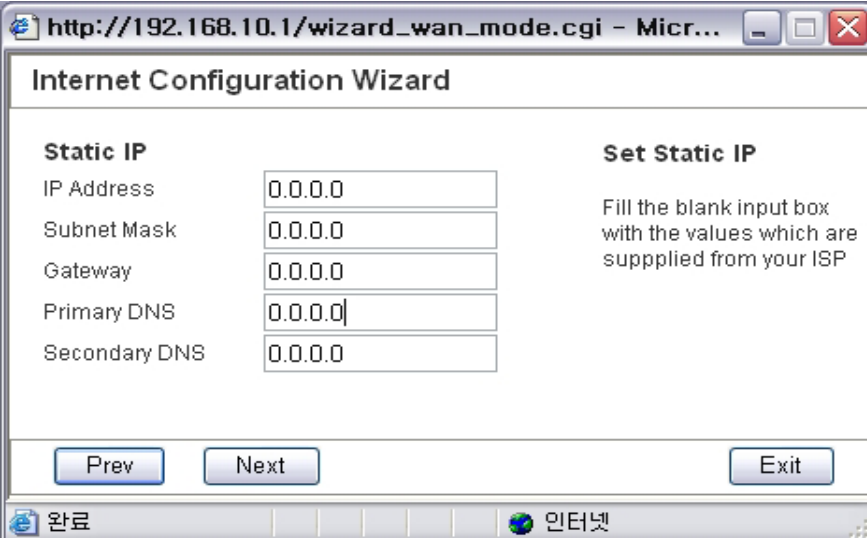

The screenshot shows a web browser window with the address bar displaying 'http://192.168.10.1/wizard_wan_mode.cgi - Micr...'. The main content area is titled 'Internet Configuration Wizard'. It is divided into two columns. The left column is titled 'Static IP' and contains five input fields: 'IP Address', 'Subnet Mask', 'Gateway', 'Primary DNS', and 'Secondary DNS'. The right column is titled 'Set Static IP' and contains the text 'Fill the blank input box with the values which are supplied from your ISP'. At the bottom of the form, there are three buttons: 'Prev', 'Next', and 'Exit'. The browser's status bar at the bottom shows '완료' (Complete) and '인터넷' (Internet).

Figure 22

- Click "Apply" to save these settings with the Router. The System will apply the new settings and start rebooting right away.

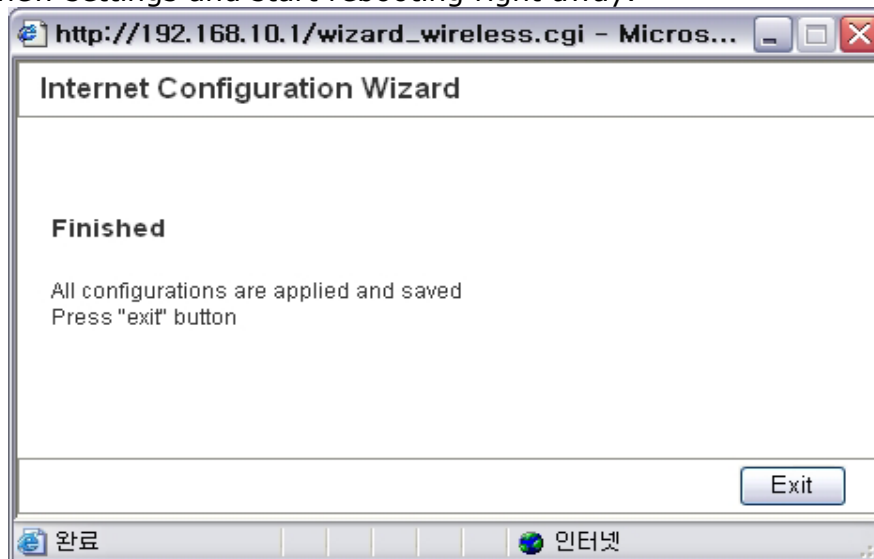


Figure 23

- After reboot, the Wireless Router will enable these settings with the Router.

6.3 Status

6.3.1 System Status

This page shows most of the basic configuration parameters of the Router. It is the first page shown after login.

Status

Statistics

Wizard

Save

Help

WAN Status

Connection Type	DHCP		
Physical Address	08-10-17-00-4e-44		
DHCP Lease timer	3600 Sec	Lease timer	3555
WAN IP Address	10.10.10.102		
Subnet Mask	255.255.255.0		
Default Gateway	10.10.10.22		
Primary DNS IP	10.10.10.20		
Secondary DNS IP	0.0.0.0		

This page will be refreshed per 10 seconds

Disconnect

LAN Status

Physical Address	08-10-17-00-4e-43
LAN IP Address	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	ON

Wireless Status

Wireless	Enabled
Connection	Disconnected
MAC	08-10-17-00-4e-43
Radio Band	802.11b/g
SSID	Ukhan
Channel	10
Mode	AP
Security	None

SYSTEM INFO

Edition Info	APR-M14H-V1.1.49EN-SDT(WLB5254AIPX11), 2007.03.23.16:35.
--------------	--

All contents are Copyright 2005- SDT Information Technology Co. LTD, Inc All rights reserved.

Figure 24

- WAN Status:** This section shows the WAN interface parameters of the wireless router. This includes information such as: Connection type (DHCP, PPPoE or Static IP), The MAC address of LAN interface, IP/Subnet Mask, Default Gateway, Primary DNS, Backup DNS.
PPPoE: In PPPoE mode, if you want to start a connection, click on the "Connect" button to open a PPPoE session.

WAN Status

Connection Type	DHCP
Physical Address	08-10-17-00-4e-44
DHCP Lease timer	0 Sec Lease timer 0
WAN IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Primary DNS IP	0.0.0.0
Secondary DNS IP	0.0.0.0
This page will be refreshed per 10 seconds	
Connect	

Figure 25

To terminate the connection, click on the "Disconnect" button.

WAN Status

Connection Type	DHCP
Physical Address	08-10-17-00-4e-44
DHCP Lease timer	3600 Sec Lease timer 3583
WAN IP Address	10.10.10.102
Subnet Mask	255.255.255.0
Default Gateway	10.10.10.22
Primary DNS IP	10.10.10.20
Secondary DNS IP	0.0.0.0
This page will be refreshed per 10 seconds	
Disconnect	

Figure 26

DHCP: In DHCP mode, press "Disconnect" button to release IP address and press "Connect" button to renew IP address.

WAN Status

Connection Type	DHCP
Physical Address	08-10-17-00-4e-44
DHCP Lease timer	0 Sec Lease timer 0
WAN IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
Primary DNS IP	0.0.0.0
Secondary DNS IP	0.0.0.0
This page will be refreshed per 10 seconds	
Connect	

Figure 27

- LAN Status: This section shows the LAN interface parameters of the wireless router. This includes information such as: The MAC address of LAN interface, IP/Subnet Mask, DHCP Server (whether the DHCP Server is Enables or disables, and display address pool).

LAN Status

Physical Address	08-10-17-00-4e-43
LAN IP Address	192.168.10.1
Subnet Mask	255.255.255.0
DHCP Server	ON

Figure 28

- Wireless Status: This section shows the WLAN interface parameters of the wireless router. This includes information such as: Wireless (whether Wireless interface status is active), Connection (whether have active wireless stations that are connecting to the AP Router, And display number of them), The MAC address of WAN interface, Radio Band (The type of transmission protocol your wireless network uses), SSID, channel number, security.

Wireless Status

Wireless	Enabled
Connection	Disconnected
MAC	08-10-17-00-4e-43
Radio Band	802.11b/g
SSID	Ukhan
Channel	10
Mode	AP
Security	None

Figure 29

- System Information: This section shows the installed version of the firmware of the Wireless router. And company information.

SYSTEM INFO

Edition Info	APR-M14H-V1.1.49EN-SDT(WLB5254AIPX11), 2007.03.23.16:35.
--------------	--

Figure 30

6.3.2 Statistics

The statistics tab main contains several of the following items for you to monitor network traffic between interface of types external (WAN) and internal (LAN and WLAN). And display System Run Time.

System Run Time

System Run Time		0 days 1 hours 46 minutes 31 seconds					
Type	Current NAT	Transmit Accumulation Statistic				Rate (KB/s)	
		Received Packets	Received Bytes (K)	Sent Packets	Sent Bytes (K)	Upload	Download
TCP	10	9570	5104	8214	1594	0	0
UDP	4	210	42	231	13	0	0
ICMP	0	0	0	0	0	0	0
OTHER	0	0	0	0	0	0	0
TOTAL	14	9780	5146	8445	1607	0	0
Refresh							

Figure 31

- System Run Time: Display System Run Time.
- Statistics: You can monitor current sent & received packets counters of wireless and Ethernet networks .To see the latest information, click "Refresh" button.

6.4 WAN Setup

Use the WAN Setup screen if you have already configured the Quick Setup Wizard section and you would like to change your Internet connection type. The WAN Settings screen allows to specify the type of WAN port connect you want to establish with your ISP. The WAN Setup offer the following selections for the router's WAN port, DHCP, PPPoE, Static IP. Select the appropriate connection mode for your ISP (Internet Service Provider).

6.4.1 Dynamic IP Address

The default setting for the router, DHCP is most commonly used for cable modem connections. There is no configuration necessary for this setting because the ISP automatically supplies the information. Choose this type while Cable mode is used.

DHCP Client Setup

MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1496"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
<input type="button" value="Apply"/>		

Figure 32

- **Physical Address Clone:** Your ISP may require a particular MAC address in order for you to connect to the Internet. This MAC address is the PC's MAC address that your ISP had originally connected your Internet connection to. Type in this MAC address in this section to replace the WAN MAC address with the MAC address of that PC (you have to be using that PC for the Clone MAC Address button to work).
- **MTU:** MTU is the Maximum Transmission Unit. It specifies the largest packet size permitted for Internet transmission. Enter your MTU number in the text-box to set the limitation. The recommended size, entered in the Size field, is 1496. You should leave this value in the 1200 to 1500 range.
- **DNS:** Check "DNS" and enter the IP address to specify DNS server for LAN DHCP server.
- Click "Apply" to save these settings with the Router. The System will apply the new settings and start rebooting right away. After reboot, the Wireless Router will enable these settings with the Router.

6.4.2 PPPoE

Some DSL-based ISPs use PPPoE (Point-to-Point Protocol over Ethernet) to establish Internet connections. If you are connected to the Internet through a DSL line, check with your ISP to see if they use PPPoE. If they do, you will have to select PPPoE.

PPPoE Setup

PPPoE Account	<input type="text"/>	
PPPoE Password	<input type="text"/>	
MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1410"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
<input checked="" type="radio"/> Connect to Internet automatically (Default) <input type="radio"/> Auto disconnect when idle, time out After <input type="text"/> (1-30)minutes, if no found the access request then auto-break off! <input type="radio"/> Connect to Internet manually		
<input type="button" value="Apply"/>		

Figure 33

- **PPPoE Account:** Enter the User Name provided by your ISP for the PPPoE connection
- **PPPoE Password:** Enter the Password provided by your ISP for the PPPoE connection
- **Physical Address Clone:** Your ISP may require a particular MAC address in order for you to connect to the Internet. This MAC address is the PC's MAC address that your ISP had originally connected your Internet connection to. Type in this MAC address in this section to replace the WAN MAC address with the MAC address of that PC (you have to be using that PC for the Clone MAC Address button to work).
- **MTU:** MTU is the Maximum Transmission Unit. It specifies the largest packet size permitted for Internet transmission. Enter your MTU number in the text-box to set the limitation. The default value of MTU is 1492 and use 1300 while the line condition is bad.
- **DNS:** Check "DNS" and enter the IP address to specify DNS server for LAN DHCP server.
- **Connection Type:** Select your PPPoE connection from these options:
Connect to Internet automatically: This feature will keep your Internet connection always alive. The Router will periodically check your Internet connection. If you are disconnected, then the Router will automatically re-establish your connection. To use this option, click the radio button next to Auto Connect.
Auto disconnect when idle, time out: If enabled, the router will trigger a PPPoE session for connection to the Internet if any client PC on your WLAN/LAN sends out a request for Internet access. However, the router

automatically disconnects the PPPoE session after the WAN connection has been idle for the amount of time you specified in the timeout box. If your Internet account is billed based on the amount of time of your Internet connection, you probably want to enable this option and enter an idle time value best suitable for your network. To use this option, click the radio button next to Connect on demand.

Connect to Internet manually: The router will connect to Internet while click the "Connect" button on the Web. And the WAN connection will disconnect. If you click "Disconnect" manually from the Web user interface. The router will not auto-connect to the Internet. To use this option, click the radio button next to Connect on demand.

- Click "Apply" to save these settings with the Router. The System will apply the new settings and start rebooting right away. After reboot, the Wireless Router will enable these settings with the Router.

6.4.3 Static IP

If you are required to use a permanent IP address to connect to the Internet, select Static IP.

Static IP Setup

WAN IP Address	<input type="text" value="10.10.10.102"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>	
Default Gateway	<input type="text" value="10.10.10.22"/>	
Primary DNS	<input type="text"/>	
Secondary DNS	<input type="text"/>	
MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Clone MAC"/>
Default MAC	<input type="text" value="08-10-17-00-4e-44"/>	<input type="button" value="Default MAC"/>
MTU	<input type="text" value="1496"/>	
<input type="button" value="Apply"/>		

Figure 34

- **WAN IP Address:** This is the Router's IP address, when seen from the Internet. Your ISP will provide you with the IP Address you need to specify here.
- **Subnet Mask:** This is the Router's Subnet Mask, as seen by users on the Internet (including your ISP). Your ISP will provide you with the Subnet Mask.
- **Default Gateway:** Your ISP will provide you with the Gateway Address, which is the ISP server's IP address.

- **Physical Address Clone:** Your ISP may require a particular MAC address in order for you to connect to the Internet. This MAC address is the PC's MAC address that your ISP had originally connected your Internet connection to. Type in this MAC address in this section to replace the WAN MAC address with the MAC address of that PC (you have to be using that PC for the Clone MAC Address button to work).
- **MTU:** MTU is the Maximum Transmission Unit. It specifies the largest packet size permitted for Internet transmission. Enter your MTU number in the text-box to set the limitation. The recommended size, entered in the Size field, is 1496. You should leave this value in the 1200 to 1500 range.
- **DNS:** Check "DNS" and enter the IP address to specify DNS server for LAN DHCP server.
- Click "Apply" to save these settings with the Router. The System will apply the new settings and start rebooting right away. After reboot, the Wireless Router will enable these settings with the Router.

6.5 LAN Setup

6.5.1 LAN Setup

The Wireless Broadband Router communicates with the wired/wireless clients through its LAN port. The LAN configuration page allows you to define the private IP address and DHCP server settings over the LAN interface.

System IP Setup

System IP Address	<input type="text" value="192.168.10.1"/>		
Subnet Mask	<input type="text" value="255.255.255.0"/>		
<input checked="" type="checkbox"/> DHCP Server on			
DHCP IP Pool	<input type="text" value="192.168.10.2"/>	-	<input type="text" value="192.168.10.102"/>
<input type="button" value="Apply"/>			

Figure 35

- **IP Address/Subnet Mask:** Enter the IP address and subnet mask for the Wireless Broadband Router LAN port. All local wired/wireless devices communicate with the device through this port. It is also the IP address of the Web-based Configuration Utility. By default, the IP address and subnet mask of the LAN port is 192.168.10.1 and 255.255.255.0 respectively.
- **DHCP Server:** The DHCP server can be ON or OFF in this screen. If you choose to set this device as a DHCP server, then it will assign IP addresses to its clients. The DHCP pool range is also changeable.

- Click "Apply" when you have finished the configuration above. And the wireless router will be automatically restarted if you change the LAN IP address.



If you change the private IP address and apply the changes, the PC from which you configure the router will lose the communication to the router. To reconnect, you will need to renew the IP address of the PC or change to an IP address compatible with the new LAN port IP address.

6.5.2 DHCP Info

You can View all the pc which connect to the Wireless Router by DHCP here.

DHCP Client Info

ID	IP Address	MAC Address	Status
1	192.168.10.102	00-14-2a-53-83-0d	79847Sec

Figure 36

6.6 Wireless Settings

The Wireless Broadband Router implements Access Point capability, which connects wireless clients to a wired LAN. It allows wireless stations to access network resources and share the broadband Internet connection.

6.6.1 Basic Wireless Settings

The basic settings for wireless networking are set on this screen.

Basic Setting

<input type="checkbox"/> Disabled Wireless	<input type="button" value="Apply"/>
Radio Band	802.11b/g ▼
Radio Mode	AP ▼
Booster Mode	<input type="checkbox"/> Enabled this mode can enhance the throughput of data transmission.
After configuring basic parameters, Please config Authentication and Encryption mode, to setup Valid and Safe wireless connection.	
SSID	Ukhan
Broadcast SSID	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Region	Default(CH 1-13) ▼
Channel	Channel 10 ▼
<input type="button" value="Apply"/>	

Figure 37

- **Radio Band:** The default setting is mixed mode [802.11B/G]. If you do not know or have both 11g and 11b devices in your network, then keep the default in mixed mode. From the drop-down manual, you can select 802.11G if you have only 11G card. If you have only 802.11 B card, then select 802.11B.
- **Radio Mode:** The Route has 3 modes: AP, WDS, AP+WDS
- **SSID:** The SSID is the network name shared among all points in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 32 characters (use any of the characters on the keyboard). Make sure this setting is the same for all points in your wireless network. For added security, you should change the default SSID (default) to a unique name.
- **Channel:** Select the channel used for wireless communication. There are 11 overlapping channels. Channels 1, 6 and 11 are non-overlapping. The default is channel 6.
- Click "Apply" when you have finished the configuration above.
- Please setup authentication and Encryption mode to setup Valid and Safe wireless connection after setting Basic Wireless parameters.

6.6.2 Advanced Wireless Settings

This tab is used to set up the Router's advanced wireless functions. These settings should only be adjusted by an expert administrator as incorrect settings can reduce wireless performance.

Advanced Setting

Beacon Interval	<input type="text" value="100"/>	(20-1000 ms)
RTS Threshold	<input type="text" value="2347"/>	(256-2432)
DTIM Period	<input type="text" value="1"/>	(1-255)
Transmit Rate	<input type="button" value="Auto"/> ▼	
Preamble Type	<input type="radio"/> Long <input type="radio"/> Short <input checked="" type="radio"/> Auto	
802.11g protection	<input type="radio"/> CTS <input type="radio"/> RTS/CTS <input checked="" type="radio"/> Disabled	
<input type="button" value="Apply"/>		

Figure 38

- **Beacon Interval:** This value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the wireless router to keep the network synchronized. A beacon includes the wireless LAN service area, a time stamp, Delivery Traffic Indicator Maps, and the Traffic Indicator Message (TIM). The default value is 100.
- **RTS Threshold:** This value should remain at its default setting of 2,347. Should you encounter inconsistent data flow, only minor modifications are recommended.
- **DTIM Interval:** This value indicates how often the Access Point sends out a Delivery Traffic Indication Message (DTIM). Lower settings result in more efficient networking, while preventing your PC from dropping into power saving sleep mode. Higher settings allow your PC to enter sleep mode, thus saving power, but interferes with wireless transmissions.
- **Transmit Rate:** The "Transmit Rate" is the data packets limitation this wireless router can transmit, The wireless router will use the highest possible selected transmission rate to transmit the data packets. The default value is Auto.
- **Preamble Type:** It defines the length of CRC block in the frames during the wireless Communication. "Short Preamble" is suitable for heavy traffic wireless network. "Long Preamble" provides much communication reliability

6.6.3 Wireless Security

This wireless router provides complete wireless LAN security functions; include WEP, WPA with pre-shared key and WPA2 with pre-shared key. With these security functions, you can prevent your wireless LAN from illegal access. Please make sure your wireless stations use the same security function.

6.6.3.1 None

Transmit data without encryption and authentication. This is the default option.

Security Configuration

Authentication Type	None ▼
<input type="button" value="Apply"/>	

Figure 39

- Click "Apply" when you have selected the "None".



If you select none, any data will be transmitted without Encryption and any station can access the wireless router.

6.6.3.2 WEP

WEP (Wired Equivalent Privacy) is an encryption method used to protect your wireless data communications. WEP uses a combination of 64-bit or 128-bit keys to provide access control to your network and encryption security for every data transmission.

Security Configuration

Authentication Type	WEP ▼
Accessorial Authentication & Encryption	Open System ▼

WEP

KEY Length	<input checked="" type="radio"/> 64 bits <input type="radio"/> 128 bits	
WEP Mode	<input checked="" type="radio"/> HEX <input type="radio"/> ASCII	
Key 1	<input type="text"/>	Key format is 10 Hex-Number, every Hex-Number can be 0-9 and A-F
Key 2	<input type="text"/>	
Key 3	<input type="text"/>	
Key 4	<input type="text"/>	
<input type="button" value="Apply"/>		

Figure 40

- **Open-System:** No authentication is used. But uses WEP encrypt data packets.
- **Share-keys:** Authentication is a process in which the AP validates whether the wireless client is qualified to access the AP's service. You must enable WEP function and define your WEP keys. The keys are used both to authenticate wireless clients and encrypt outgoing data.
- **Auto-Select:** It can detect Wireless Client authentication information, and automatically choose Open-System or Share-Keys mode to communicate with client. When use Auto-Select mode, you must setup WEP keys which are used by authentication system.
- **WEP Length:** Selects 64-bit or 128-bit WEP encryption. Be sure that the key length setting in the AP shall be the same as in wireless clients, or the communication will not work.
- **WEP Mode:** You may select to select ASCII Characters or Hexadecimal Digits (in the "A-F", "a-f" and "0-9" range) to be the WEP Key.
- **Default Key:** The Key selected here must match the key selected in the client. For example, if you select Key 1 here you have to select Key 1 for the client. The default is 1.
- **Key 1~4:** Enter one to four WEP keys in either ASCII or Hexadecimal format. You can use 64 bits or 128 bits as the encryption algorithm.

Enter one to four WEP keys in either ASCII or Hexadecimal format. You can use 64 bits or 128 bits as the encryption algorithm.

Note that when using Hexadecimal format, only digits 0-9 and letters A-F, a-f are allowed. Valid key length for each encryption type is as below:

Key Length	HEX Format	ASCII Format
64 Bit	10 hexadecimal digits	5 ASCII characters
128 Bit	26 hexadecimal digits	13 ASCII characters

- Click "Apply" at the bottom of the screen to save the above configurations.

6.6.3.3 WPA Personal

Wi-Fi Protected Access (WPA) is an advanced security standard. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses TKIP and AES to change the encryption key frequently. This can improve security very much.

Security Configuration

Authentication Type	WPA Personal ▼
Accessorial Authentication & Encryption	TKIP ▼

Pre-Shared Key

Key Format	Please input 8-63 characters
KEY	<input type="text"/>
Rekey Time (sec)	86400
<input type="button" value="Apply"/>	

Figure 41

- **TKIP:** Temporal Key Integrity Protocol (TKIP) utilizes a stronger encryption algorithm and includes Message Integrity Code (MIC) to provide protection against hackers.
- **AES:** Advanced Encryption System (AES) utilizes a symmetric 128-Bit block data encryption. It's the strongest encryption currently available.
- **WPA Pass Phrase:** The WPA Pass Phrase is used to authenticate and encrypt data transmitted in the wireless network. The input format is in character style and key size should be in the range between 8 and 63 characters.
- **Clear:** If you want to retype again. Just click "Clear" and "WPA Pass Phrase" fields will be cleared.
- **Rekey Time (sec):** Specifies the timer the WPA key must changes. The change is done automatically between the server and the client. The default value is 86400.
- Click "Apply" at the bottom of the screen to save the above configurations.

6.6.3.4 WPA2 Personal

The WPA2 is a stronger version of WPA. You can use a pre-shared key to authenticate wireless stations and encrypt data during communication. It uses AES to change the encryption key frequently. This can improve security very much.

Security Configuration

Authentication Type	WPA2 Personal ▼
Accessorial Authentication & Encryption	AES ▼

Pre-Shared Key

Key Format	Please input 8-63 characters
KEY	<input type="text"/>
Rekey Time (sec)	86400
<input type="button" value="Apply"/>	

Figure 42

- **AES:** Advanced Encryption System (AES) utilizes a symmetric 128-Bit block data encryption. It's the strongest encryption currently available.
- **WPA Pass Phrase:** The WPA Pass Phrase is used to authenticate and encrypt data transmitted in the wireless network. The input format is in character style and key size should be in the range between 8 and 63 characters.
- **Clear:** If you want to retype again. Just click "Clear" and "WPA Pass Phrase" fields will be cleared.
- **Rekey Time (sec):** Specifies the timer the WPA key must changes. The change is done automatically between the server and the client. The default value is 86400.
- Click "Apply" at the bottom of the screen to save the above configurations.

6.6.3.5 WPA&WPA2 Personal

Auto-Select WPA/WPA2 can detect Wireless Client authentication information, and automatically choose WPA or WPA2 mode to communicate with client. Operation is the same as WPA or WPA2.

Security Configuration

Authentication Type	WPA&WPA2 Personal ▼
---------------------	---------------------

Pre-Shared Key

WPA	<input checked="" type="radio"/> TKIP <input type="radio"/> AES
WPA2	<input checked="" type="radio"/> AES
KEY Mode	Please input 8-63 characters
WPA Pass Phrase	<input type="text"/>
WPA2 Pass Phrase	<input type="text"/>
Rekey Time (sec)	86400
<input type="button" value="Apply"/>	

Figure 43

- Click "Apply" at the bottom of the screen to save the above configurations.

6.6.4 Wireless MAC Filter

This Wireless router has the capability to control the wireless client access based on the MAC address of the wireless client. The user has the flexibility to customize your own control policy based on these options:

Wireless Access Control Configuration

<input type="checkbox"/> Enable Wireless Access Control		<input type="button" value="Apply"/>	
<input type="radio"/> Defined items in MAC list are PERMITTED to connect AP, others are DENIED		<input type="button" value="Apply"/>	
<input checked="" type="radio"/> Defined items in MAC list are DENIED to connect AP, others are PERMITTED			
MAC	<input type="text"/>	<input type="button" value="Add"/>	
Description	<input type="text"/>		
ID	MAC	Description	Delete

Figure 44

- **Enable Wireless Access Control:** To enable Wireless MAC Filter, click the check box. The default is "disable".
- You can choose a default operation for your factual security or management consideration:
 Defined items in MAC list are PERMIT to connect AP, others are DENIED.
 Defined items in MAC list are DENIED to connect AP, others are PERMIT.
 Click "Apply" when you have selected,

- **MAC:** Enter the MAC Address of a station.
- **Description:** Enter the Comment of station.
- Click "Add". Then this wireless station will be added into the "Current Access Control List" below.

ID	MAC	Description	Delete
1	00-70-43-28-0A-1F	mar	<input type="button" value="Delete"/>

Figure 45

- If you want to remove some MAC address from the "Current Access Control List", select the MAC addresses you want to remove in the list and then click "Delete".

6.6.5 Association Table

You can see the status of all active wireless stations that are connecting to the wireless router.

Association Table

No	MAC Address	Status	Band	Rate	Signal Quality	RSSI	Power Save
1	00-70-43-28-0A-1F	Associated	b/g	54M	30	54	No

Figure 46

- To see the latest information, click Refresh button.

6.6.6 WDS Set

You can set the wireless Bridge MAC here. The bridge uses to connect between more than 2 routers.

Wireless Bridge Configuration

Wireless Bridge MAC	<input type="text"/>	<input type="button" value="Add"/>
Description	<input type="text"/>	

Current Wireless Bridge Information

No	MAC	Description	Delete
----	-----	-------------	--------

Figure 47

6.7 Routing

If the Router is connected to more than one network, it may be necessary to set up a static route between them. A static route is a pre-determined pathway that network information must travel to reach a specific host or network.

Routing Table Management

Type	Target	Mask	Gateway
NET <input type="button" value="v"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="button" value="Add"/>			

ID	Type	Target	Mask	Gateway	Delete
----	------	--------	------	---------	--------

Figure 48

- **Type / Target / Mask / Gateway:** Fill in these fields required by this Static Routing function.
- **Add:** Fill in the all of the setting to be added and then click "Add". Then this Special Application setting will be added into the "Current Routing Table" below.
- **Current Routing Table:** This display shows the valid routing paths in Broadband Router. User can view the information about current routing paths
- If you want to remove some route entries from the "Current Routing Table", select the Route entry you want to remove in the table and then click "Delete".

6.8 NAT

Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single Public IP Address. NAT provides Firewall

protection from hacker attacks and has the flexibility to allow you to map Private IP Addresses to Public IP Addresses for key services such as Websites and FTP.

6.8.1 DMZ Host Setup

If you have a local client PC that cannot run an Internet application (e.g. Games) properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access by defining a DMZ Host. The DMZ function allows you to re-direct all packets going to your WAN port IP address to a particular IP address in your LAN. The difference between the virtual server and the DMZ function is that the virtual server re-directs a particular service/Internet application (e.g. FTP, websites) to a particular LAN client/server, whereas DMZ re-directs all packets (regardless of services) going to your WAN IP address to a particular LAN client/server.

DMZ Host Setup

<input type="checkbox"/> DMZ	192.168.10.0	<input type="button" value="Apply"/>
------------------------------	--------------	--------------------------------------

Figure 49

- DMZ : Enable/disable DMZ
- DMZ Host: Input the IP address of a particular host in your LAN that will receive all the packets originally going to the WAN port/Public IP address above, you need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.
- Click "Apply" at the bottom of the screen to save the DMZ configurations.



If there is a conflict between the Virtual Server and the DMZ setting, then Virtual Server function will have priority over the DMZ function.

6.8.2 FTP Private Port

FTP private port enables user to setup FTP server which is not using the standard port 21.

FTP Private Port

<input type="checkbox"/> Port Number	1025	<input type="button" value="Apply"/>
--------------------------------------	------	--------------------------------------

Figure 50

- Check port number and enter the number and then press the "Apply" button to setup Private FTP port. The default Value is 1025.

6.8.3 Virtual Server Setup

Use the Virtual Server function when you want different servers/clients in your LAN to handle different service/Internet application type (e.g. Email, FTP, Web server etc.) from the Internet. Computers use numbers called port numbers to recognize a particular service/Internet application type. The Virtual Server allows you to re-direct a particular service port number (from the Internet/WAN Port) to a particular LAN private IP address and its service port number.

Virtual Server Setup

Rule Name	<input type="text"/>
Internal Server IP Address	192.168.10. <input type="text"/>
Protocol	TCP <input type="button" value="v"/>
External Port	<input type="text"/>
Internal Port	<input type="text"/>
<input type="button" value="Add"/>	

Figure 51

- **Rule Name:** You can enter whatever you want. It's just a string.
- **Internal Server IP:** Enter the host IP address to which the packet will be forwarded. The virtual server can be set easily by setting the internal server IP address only. You need to give your LAN PC clients a fixed/static IP address for Virtual Server to work properly.
- **Protocol:** Chose TCP/UDP type for the packet you want to forward. If the rule existed in predefined virtual server rule, you can choose the rule.
- **External Port:** Enter the port number (The value's range is 1 to 65535) from which the packet will be on WAN.
- **Internal Port:** Enter the port number to which the packet will be forwarded on LAN
- Press "Add" button after enter the all fields to add the rule.
- Check to select the rule and press "Delete" to delete the rule.

ID	Rule Name	Internal IP	Protocol	External Port	Internal Port	Delete
1	ftp	192.168.10.4	TCP	21	21	<input type="button" value="Delete"/>

Figure 52

The diagram below demonstrates one of the ways you can use the Virtual Server function. Use the Virtual Server when you want the FTP server located in your private LAN to be accessible to Internet users. The configuration below means that any request coming from the Internet to access your web server will be translated to your LAN's FTP server (192.168.10.6). Note: For the virtual server to work properly Internet/remote users must know your global IP address.

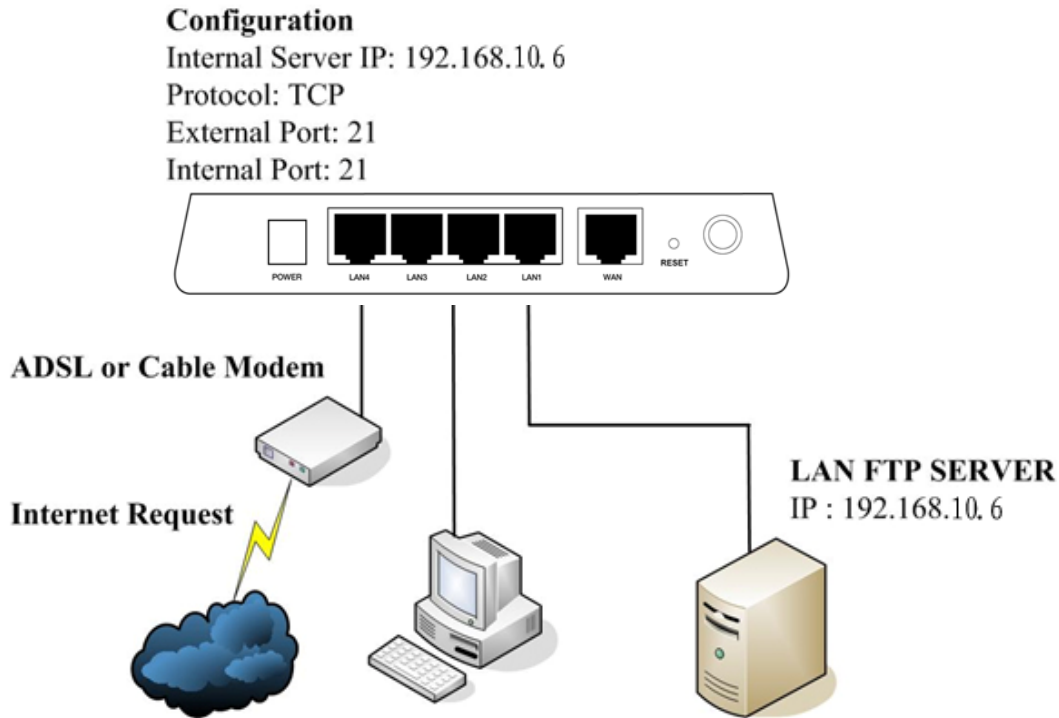


Figure 53

6.8.4 Port Trigger

Port Trigger set the port you want used for some special use.

Port Triggering

Predefined Trigger Rules	GuruGuru ▼
Rule Name	GuruGuru
Trigger Protocol	TCP ▼
Trigger Port	31200 -
Forward Protocol	TCP ▼
Forward Port	9292
<input type="button" value="Add"/>	

Figure 54

- **Rule Name:** You can enter whatever you want. It's just a string.
- **Trigger Protocol:** Chose TCP/UDP type for the packet you want to trigger. If the rule existed in predefined virtual server rule, you can choose the rule.
- **Trigger Port:** Enter the port number (The value's range is 1 to 65535) from which the packet will be on WAN.
- **Forward Protocol:** Chose TCP/UDP type for the packet you want to forward. If the rule existed in predefined virtual server rule, you can choose the rule.
- **Forward Port:** Enter the port number to which the packet will be forwarded on LAN
- Press "Add" button after enter the all fields to add the rule.
- Check to select the rule and press "Delete" to delete the rule.

ID	Rule Name	Trigger Condition	Forward Condition	Delete
1	WarCraft	tcp:6112	tcp:6112	<input type="button" value="Delete"/>

Figure 55

6.9 Fire Wall

The Wireless Broadband Router provides extensive firewall protection by restricting connection parameters, thus limiting the risk of hacker attack, and defending against a wide array of common Internet attacks.

6.9.1 MAC Filtering

This Wireless router has the capability to control the wired client access based on the MAC address of the wired client. The user has the flexibility to customize your own control policy based on these options:

MAC Filtering Configuration

Status	The current status is disabled	<input type="button" value="Start"/>
<input checked="" type="checkbox"/> If checked, the undefined item in MAC Address list is allowed to access Internet;Unchecked means reverse		<input type="button" value="Apply"/>
MAC Address	<input type="text"/>	<input type="button" value="Add"/>

Figure 56

- **Enable MAC Filtering:** To enable MAC Filtering, click the check box. The default is "disable".
- You can choose a default operation for your factual security or management consideration:
 - Defined items in MAC list are DENIED to access internet, others are PERMIT
 - Defined items in MAC list are PERMIT to access internet, others are DENIEDClick "Apply" when you have selected,
- **MAC:** Enter the MAC Address of a station.
- **Description:** Enter the Comment of station.
- Click "Add". Then this wired station will be added into the "Current Access Control List" below.

ID	MAC Address	Rule	Delete
1	00-14-2a-53-83-0a	Permit	<input type="button" value="Delete"/>

Figure 57

- If you want to remove some MAC address from the "Current Access Control List ", select the MAC address you want to remove in the list and then click "Delete ".

6.9.2 Access Control

If you want to restrict users from accessing certain Internet applications/services (e.g. Internet websites, email, FTP etc.).This is the place to set that configuration. Access Control allows users to define the traffic type permitted in your LAN. You can control which PC client can have access to these services.

Connection Filtering Configuration

Status	The current status is disabled		<input type="button" value="Start"/>
<input checked="" type="checkbox"/> If checked, the undefined item in IP Address list is allowed to access Internet;Unchecked means reverse			<input type="button" value="Apply"/>
Rule Name	<input type="text"/>		
Source IP Address	192.168.10. <input type="text"/> - 192.168.10. <input type="text"/>		
Protocol	<input type="text" value="ALL"/> ▼		
Destination Port	<input type="text"/> - <input type="text"/>		
status	<input type="text" value="Permit"/> ▼		
Days To Block	<input type="checkbox"/> Everyday <input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat		
Times To Block	<input type="checkbox"/> All Day <input type="text" value="00:00"/> ▼ - <input type="text" value="00:00"/> ▼		
<input type="button" value="Add"/>			

Figure 58

Enable Access Control: To filter the outgoing packets for security or management consideration by IP Address, either permitting or blocking access, Enable Access Control is checked.

You can choose a default operation for your factual security or management consideration:

The Undefined items beside the Rule list are PERMIT to access internet
DENIED to access internet.

The Undefined items beside the Rule list are DENIED to access internet
DENIED to access internet.

Rule Name: Enter the rule name which you want, it is just only a string.

Source IP: Enter the IP address of a station which is you want to setting.

Predefined Applications: Chose the Predefined rule in the list to be allowed or forbade accessing Internet.

Protocol & Port: Chose protocol type (TCP/UDP) and enter the single port number or the port range to allow or forbid.

Action: You can choose the rule is be allowed or forbade accessing Internet.

Rule Name	Source IP	Protocol	Dest Port	Days	Times	Rule	Delete
test	192.168.10.50-192.168.10.60	TCP	533-537	Everyday	All Day	Permit	<input type="button" value="Delete"/>

Figure 59

6.9.3 URL Filtering

URL (Uniform Resource Locator – e.g. an address in the form of <http://www.abcde.com> or <http://www.example.com>) filter rules allow you to prevent users on your network from accessing particular websites by their URL. There are no pre-defined URL filter rules; you can add filter rules to meet your requirements.

URL Filtering Configuration

Note: You can use wildcards(* and ?), "*" is the multi-letters, "?" is a letter; For example: *.sex* express that all URL with "sex" will be blocked!

☒ Keyword

☐ URL

Add

Figure 60

- **Enable URL Filtering:** To enable or disable URL Filter feature. Enable URL Filtering is checked.
- You can choose a default operation for your factual security or management consideration:
 - Predefined URLs/Keywords in list are BLOCKED, others are PERMITTED.
 - Predefined URLs/Keywords in list are PERMITTED, others are BLOCKED.
- **URLs/Keywords:** Enter the specified URL site for security or management consideration by URLs/Keywords, either permitting or blocking access.

ID	Filtering Keyword / URL	Delete
1	example.com	<div>Delete</div>

Figure 61

- Press "Delete" button to delete a rule after select a rule.

6.10 DDNS

DDNS allows you to map the static domain name to a dynamic IP address. You must get an account, password and your static domain name from the DDNS service providers.

DDNS Setup

* Sign up www.dyndns.org first.(Free)	
DynDNS Operation	<input type="radio"/> Start <input checked="" type="radio"/> Stop
User ID	<input type="text"/>
Password	<input type="text"/>
Host Name	<input type="text"/>
Information	close!
<input type="button" value="Apply"/>	<input type="button" value="Reconnect"/>

Figure 62

- **User ID/Password/Host Name:** Enter your registered domain name and your username and password for this service.
- **Information:** The status of the DDNS service connection is displayed here. To see the latest DDNS status, click Refresh button.

6.11 MISC**6.11.1 Login ID & Password Setup**

In factory setting, the default password is "N/A", and that for user is also password. You can change the default password to ensure that someone cannot adjust your settings without your permission. Every time you change your password, please record the password and keep it at a safe place.

Login ID & Password Setup

Login name is "admin "		<input type="button" value="Apply"/>
New Password	<input type="text"/>	
Confirm New Password	<input type="text"/>	

Figure 63

- New Password. Enter your new password.
- Confirmed New Password: Enter your new password again for verification purposes.
- Click "Apply" at the bottom of the screen to change the password.



If you forget your password, you'll have to reset the router to the factory default (Password is "N/A") with the reset button (see router's front panel).

6.11.2 Remote Mgmt

This feature allows you to manage the Router from a remote location, via the Internet. To enable this feature, check the "Management Port" checkbox, and click the Apply button.

Remote Mgmt

<input type="checkbox"/> Management Port	<input type="text" value="8080"/>	<input type="button" value="Apply"/>
--	-----------------------------------	--------------------------------------

Figure 64

- Management Port: Enter the port number.
- Click "Apply" at the bottom of the screen to change the Management Port.

When you want to access the web-based management from a remote site, enter `http:// WAN IP Address:8080`. (e.g:<http://192.168.10.1:8080>).

`http://192.168.10.1:8080`

Figure 65

6.11.3 WAN Link Status & Setup

WAN Link Status & Setup

WAN Link Status	100Mbps-Full	WAN Link Setup	Auto <input type="button" value="v"/>	<input type="button" value="Apply"/>
-----------------	--------------	----------------	---------------------------------------	--------------------------------------

Figure 66

6.11.4 Restore Default / Restart System

Restore Default / Restart System

<input type="button" value="Restore Default"/>	<input type="button" value="Restart System"/>
--	---

Figure 67

Restore Default / Restart System

Restore the Router's configuration to its factory default settings. Restore Factory Defaults. To clear all of the Router's settings and reset them to its factory defaults.

- Click the Restore Default button. Router will restart automatically.

Restart System

Click "Restart System" button to reboot router.

REBOOT

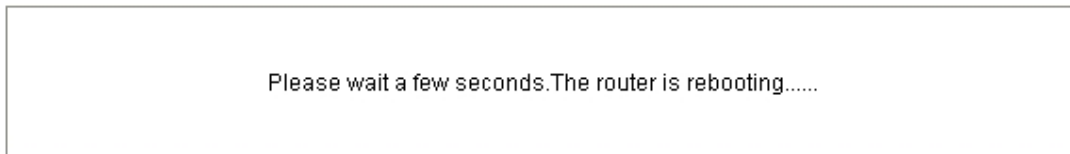


Figure 68

6.11.5 Firmware Upgrade

Upgrade the Broadband router's system firmware. To upgrade the firmware of your Broadband router, you need to download the firmware file to your local hard disk, and enter that file name and path in the appropriate field on this page. You can also use the Browse button to find the firmware file on your PC.

Firmware Upgrade

Current Version:	APR-M14H-V1.1.49EN-SDT(WLB5254AIPX11), 2007.03.23.16:35.		
New Firmware File:	<input type="text"/>	<input type="button" value="찾아보기..."/>	<input type="button" value="Upgrade"/>

Figure 69

Appendix | : Troubleshooting

1. I cannot access the Web-based Configuration Utility from the Ethernet computer used to configure the router.

- Check that the LAN LED is on. If the LED is not on, verify that the cable for the LAN connection is firmly connected.
- Check whether the computer resides on the same subnet with the router's LAN IP address.
- If the computer acts as a DHCP client, check whether the computer has been assigned an IP address from the DHCP server. If not, you will need to renew the IP address.
- Use the ping command to ping the router's LAN IP address to verify the connection.
- Make sure your browser is not configured to use a proxy server.
- Check that the IP address you entered is correct. If the router's LAN IP address has been changed, you should enter the reassigned IP address instead.

2. I forget Password (Reset the Router without Login)

- Plug out the power of the Router.
- Use a pencil to press and hold the default button on the back panel of the Router. Plug in the power of the Router.
- Press and hold the default button wait for a few seconds until the CPU LED indicator stays green.
- Reboot the AP.
- After the above those steps, the manufacture's parameters will be restored in the Router. The default password is N/A.

3. I have some problems related to Connection with Cable Modem please follow the following steps to check the problems:

- Check whether the DSL modem works well or the signal is stable. Normally there will be some indicator lights on the modem, users can check whether the signal is ok or the modem works well from those lights. If not, please contact the ISP.
- Check the front panel of the Router, there are also some indicator lights there. When the physical connection is correct, the Power light and the CPU

light should be solid; the WAN light should be blinking. If you use your computer, the corresponding LAN port light should be blinking too. If not, please check whether the cables work or not.

- Repeat the steps in WAN Setup Connect with Internet through DSL Modem.

4. I can browse the router's Web-based Configuration Utility but cannot access the Internet.

- Check if the WAN LED is ON. If not, verify that the physical connection between the router and the DSL/Cable modem is firmly connected. Also ensure the DSL/Cable modem is working properly.
- If WAN LED is ON, open the System Overview page of the Web configuration utility and check the status group to see if the router's WAN port has successfully obtained an IP address.
- Make sure you are using the correction method (Dynamic IP Address, PPPoE, or Static IP) as required by the ISP. Also ensure you have entered the correct settings provided by the ISP.
- For cable users, if your ISP requires a registered Ethernet card MAC address, make sure you have cloned the network adapter's MAC address to the WAN port of the router. (See the MAC Address field in WAN Setup.)

5. My wireless client cannot communicate with another Ethernet computer.

- Ensure the wireless adapter functions properly. You may open the Device Manager in Windows to see if the adapter is properly installed.
- Make sure the wireless client uses the same SSID and security settings (if enabled) as the Wireless Broadband Router.
- Ensure that the wireless adapter's TCP/IP settings are correct as required by your network administrator.
- If you are using a 802.11b wireless adapter, and check that the 802.11G Mode item in Wireless Basic Setting page, is not configured to use 802.11G Performance.
- Use the ping command to verify that the wireless client is able to communicate with the router's LAN port and with the remote computer. If the wireless client can successfully ping the router's LAN port but fails to ping the remote computer, then verify the TCP/IP settings of the remote computer.

FCC Compliance Statement

CAUTION: Any changes or modifications in construction of this device which are not expressly approved the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications, however, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning:

This is Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Appendix II: Specification

Standard	LAN - IEEE802.3, IEEE802.3u, IEEE802.3x Wireless - 2.4GHz to 2.462GHz, IEEE802.11b, 11g WLAN
Port	WAN 1 - 10/100Mbps TP Type (Auto MDI-X) LAN 4 - 10/100Mbps N-way Switch TP Type (Auto MDI-X)
Memory	Flash Rom - 2M SDRAM - 32M
Protocol	NAT, NAPT, PAT, PPPoE, HTTP, DHCP, TCP/IP, UDP, DDNS
Firewall/ Security	URL Filter to block access to undesirable site, NAT Firewall, Internal password, MAC and IP address filtering
VPN Pass Through	PPTP, IPSec, L2TP
Management	WEB Based Management, Remote Management
Plug & Play	UPnP(Universal Plug & Play) support (Only for Windows ME, XP or higher OS)
Other Functio	Multi segment LAN, DHCP Server, DHCP Client Information, Routing table, DMZ, Virtual Server, Access control, Dynamic DNS
LED	Power, Status, WAN, WLAN, LAN1~4, Link/Act
SIZE	148mm(W) * 100mm(D) * 32mm(H)
Power	9V 1000mA DC
Operation Temperature	Operation Temp(0 ~ 50℃), Storage Temp(-20~70℃)
Humidity	5 ~ 95% Non-condensing
RF Out Power	15dBm +/- 2dBm
Channel	1 ~ 11 (North America) 1 ~ 13 (General Europe) / 1 ~ 14 (Japan)
Data Rate	802.11b - 1/ 2/ 5.5/ 11Mbps 802.11g - 6/ 9/ 12/ 18/ 24/ 36/ 48/ 54Mbps
Wireless Security	802.1x user authentication support 64 bit / 128bit WEP wireless data encryption
Antenna Type	1 X 2.4Ghz Dipole Antenna